ASSEMBLY INSTRUCTIONS

Read these instructions carefully. Refer to hardware and furniture parts list for guidance. Be sure all parts are complete, before assembling. Place all wooden furniture parts on a clean and flat soft surface to prevent scratches. Refer to steps provided as assembling guide.

CAUTIONS :

1.Do not **FULLY-TIGHTEN** the nuts or nut bolts until all are in place.

2.To prevent thread damage.Ensure that nuts or nut bolts are not over-tightened.

3.Hardware is to be kept out of reach of children.


PART LIST

ITEM	DESCRIPTION	QTY
A	BACK REST	1 PC
B	CUSHION SEAT	1 PC
C	SEAT FRAME	1 PC
D	BACK LEG	1 PC
E	FRONT LEG	2 PCS


HARDWARE LIST

ITEM	DESCRIPTION	QTY
1	JCBC SCREW M6 x 30mm	4 PCS
2	JCBC SCREW M6 x 40mm	2 PCS
3	JCBC SCREW M6 x 50mm	4 PCS
4	JCBC SCREW M6 x 70mm	4 PCS
5	SPRING WASHER 1/4"	14 PCS
6	FLAT WASHER 1/4"	10 PCS
7	PAN HEAD WOOD SCREW M5 X 32mm	4 PCS
8	WOOD DOWEL DIA 8 x 25MM	2 PCS
9	WOOD BUTTON DIA 14:5	4 PCS
10	ALLEN KEY M4 (BALL SHAPE)	1 PC


STEP 1 :

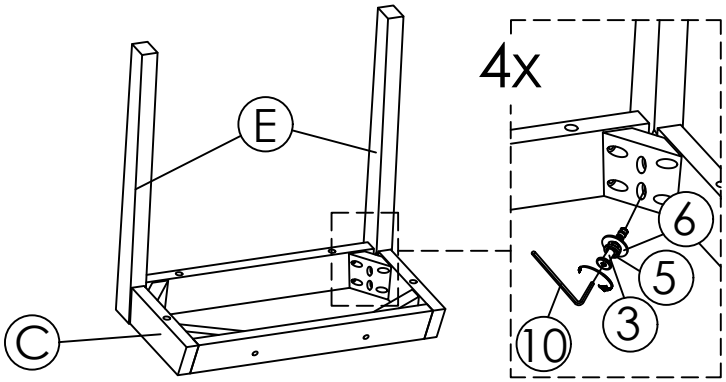


STEP 2 :

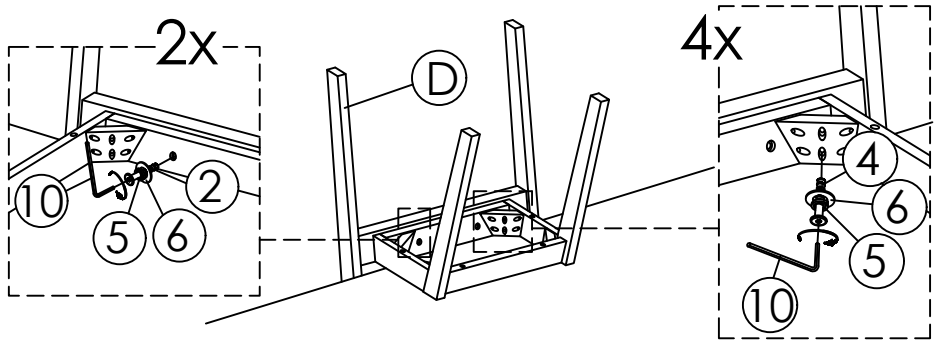


STEP 3 :

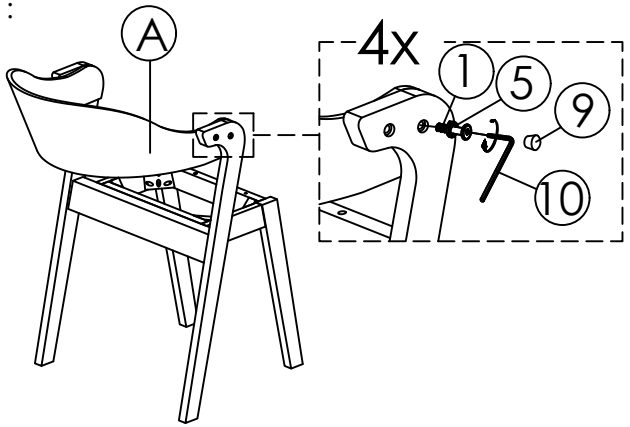

STEP 4 :

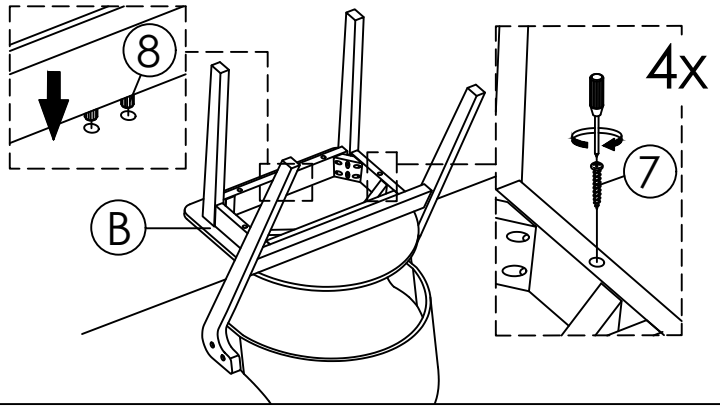

STEP 5 :

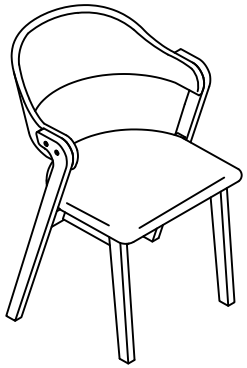

COMPLETED CHAIR ASSEMBLY