ASSEMBLY INSTRUCTIONS

Read these instructions carefully. Refer to hardware and furniture parts list for guidance. Be sure all parts are complete, before assembling. Place all wooden furniture parts on a clean and flat soft surface to prevent scratches. Refer to steps provided as assembling guide.

CAUTIONS :
1.Do not **FULLY-TIGHTEN** the nuts or nut bolts until all are in place.
2.To prevent thread damage.Ensure that nuts or nut bolts are not over-tightened.
3.Hardware is to be kept out of reach of children.


PART LIST

ITEM	DESCRIPTION	QTY
A	TV CABINET	1 PC
B	TV CABINET LEG	2 PCS


HARDWARE LIST

ITEM	DESCRIPTION	QTY
1	JCBC SCREW M6 x 40MM	10 PCS
2	1/4" SPRING WASHER	10 PCS
3	1/4" FLAT WASHER	10 PCS
4	M4 ALLEN KEY (BALL SHAPE) LONG	1 PC

STEP 1

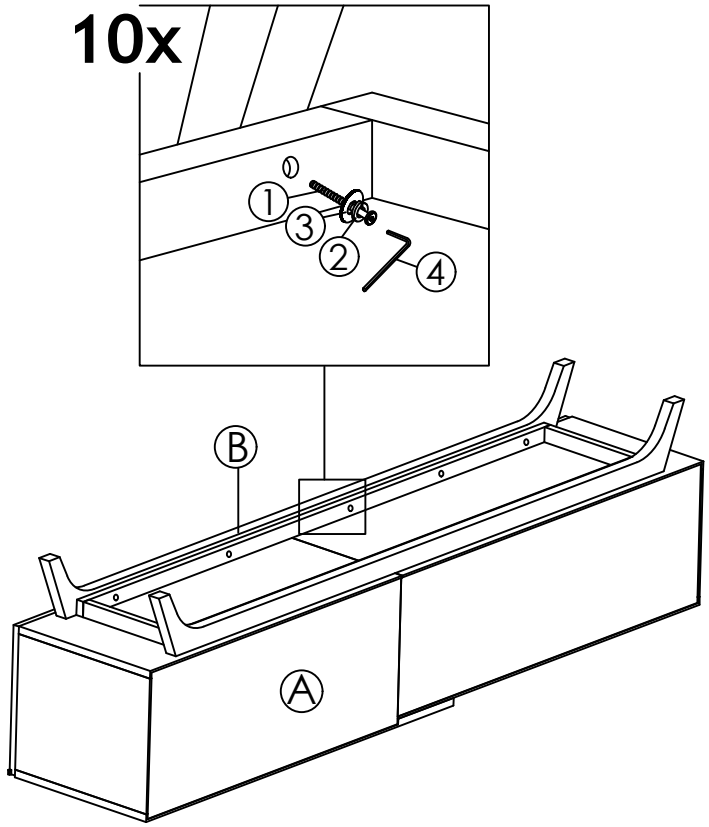

STEP 2

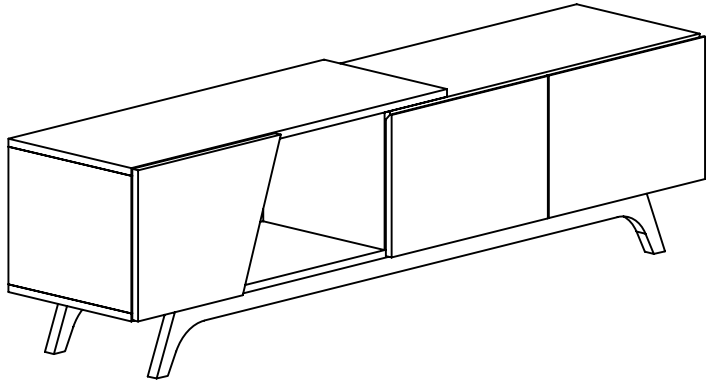

ASSEMBLY COMPLETED