












246-000033


| | | | |
|---|---|---|---|
| Minifix Screw  X44 A | Lock metal fix  X4 F | Lock  X4 K | Base  X6 Q |
| Minifix  X44 B | Drawer rail   X2 G/N | Screw 4*20  X20 L | Corner bracket metal fix  X4 R |
| Wood Minifix  X18 C | Screw 4*30  X8 H | Whole overlay hinge  X4 M | |
| Wire box  X2 D | Handle  X4 I | Screen base  X2 O | |
| Screen 3.5*14  X68 E | Handle screw M*18  X8 J | Screen screw  X2 P | |

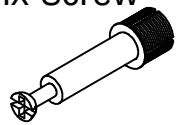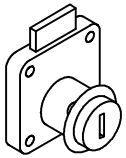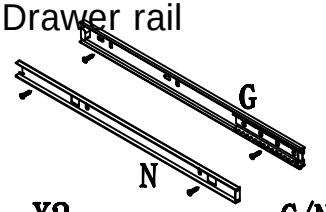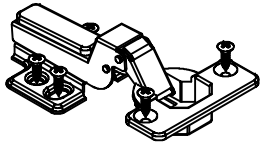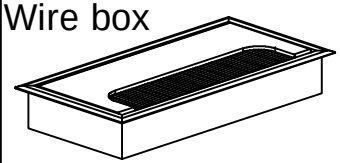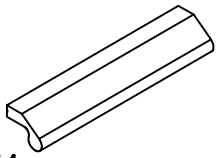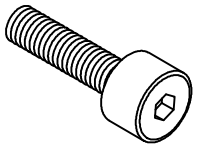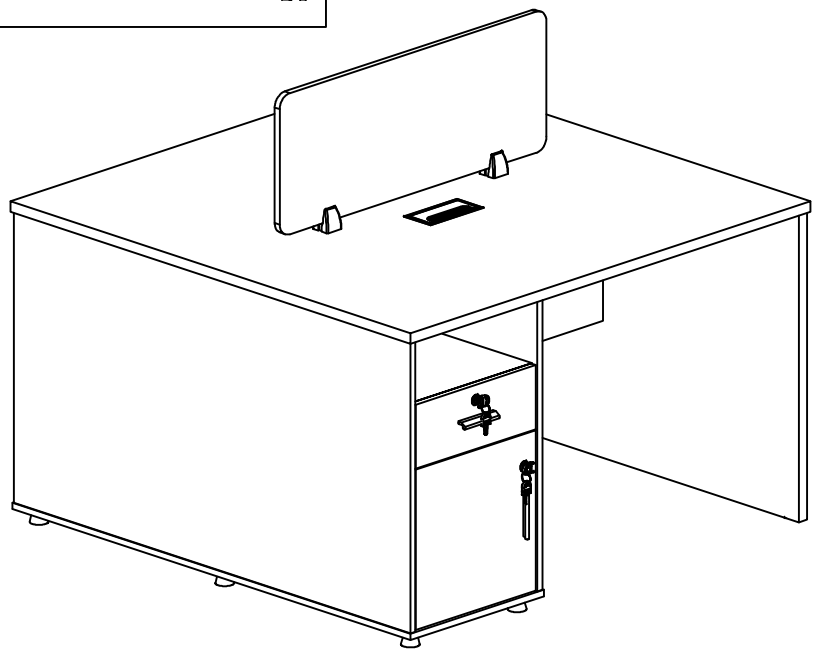

KW-09-2
(1200X1200X760)

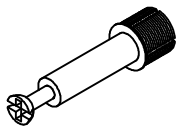


X20 A



X20 B




X10 C

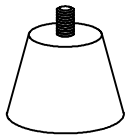


X6 Q

STEP:1

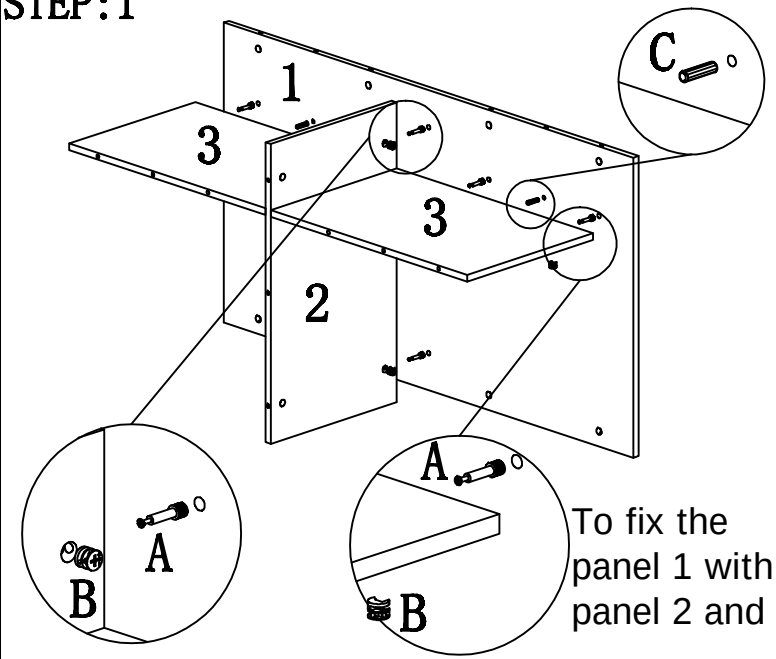



To fix the panel 1 with panel 2 and 3


To fix with the panel 4

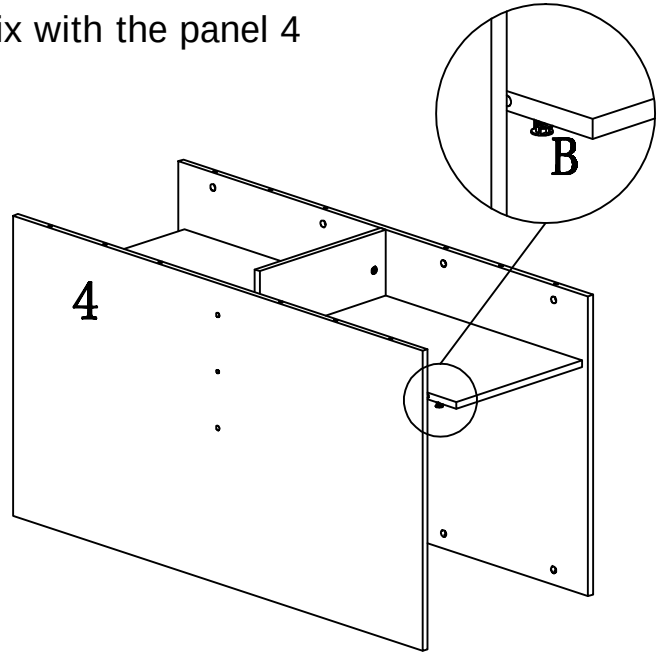



To fix the base Q on panel 5

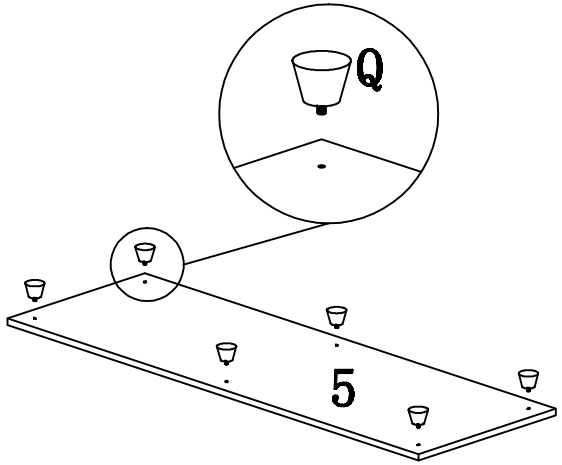



To fix with the bottom panel 5

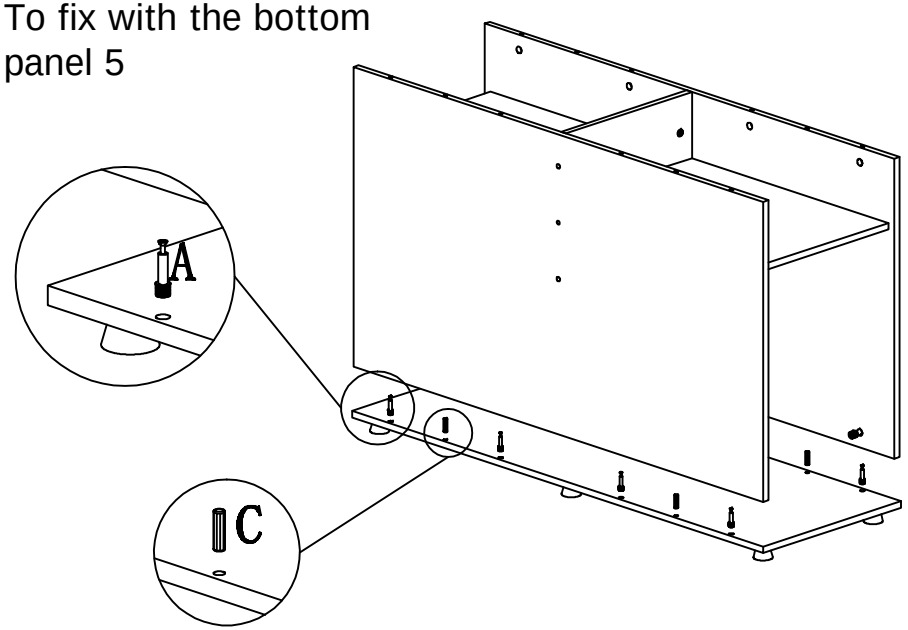


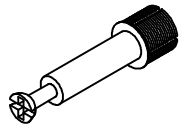

X16 A

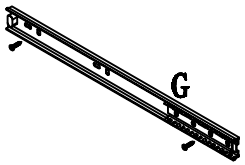



X2 G




X16 B



X4 F



X8 C

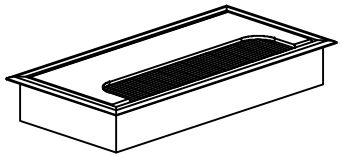

X2 D


3.5*14



X20 E


STEP:2


To fix with middle panel 6 and side panel 7

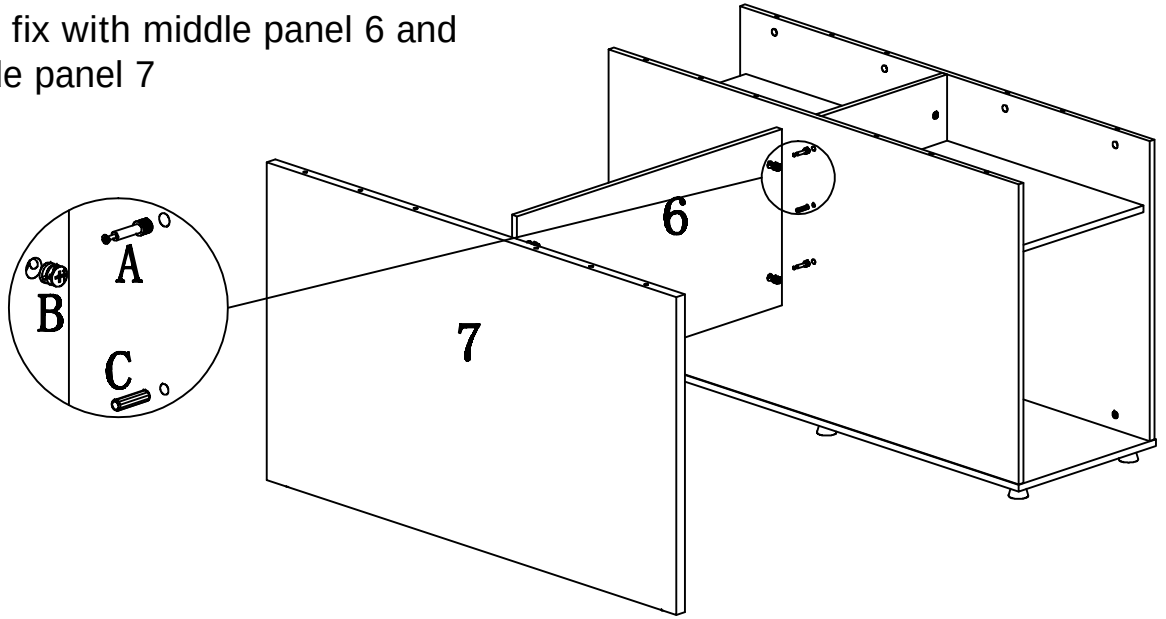



Then to fix the table top panel 8

To fix the both side drawer rail and lock metal fix F

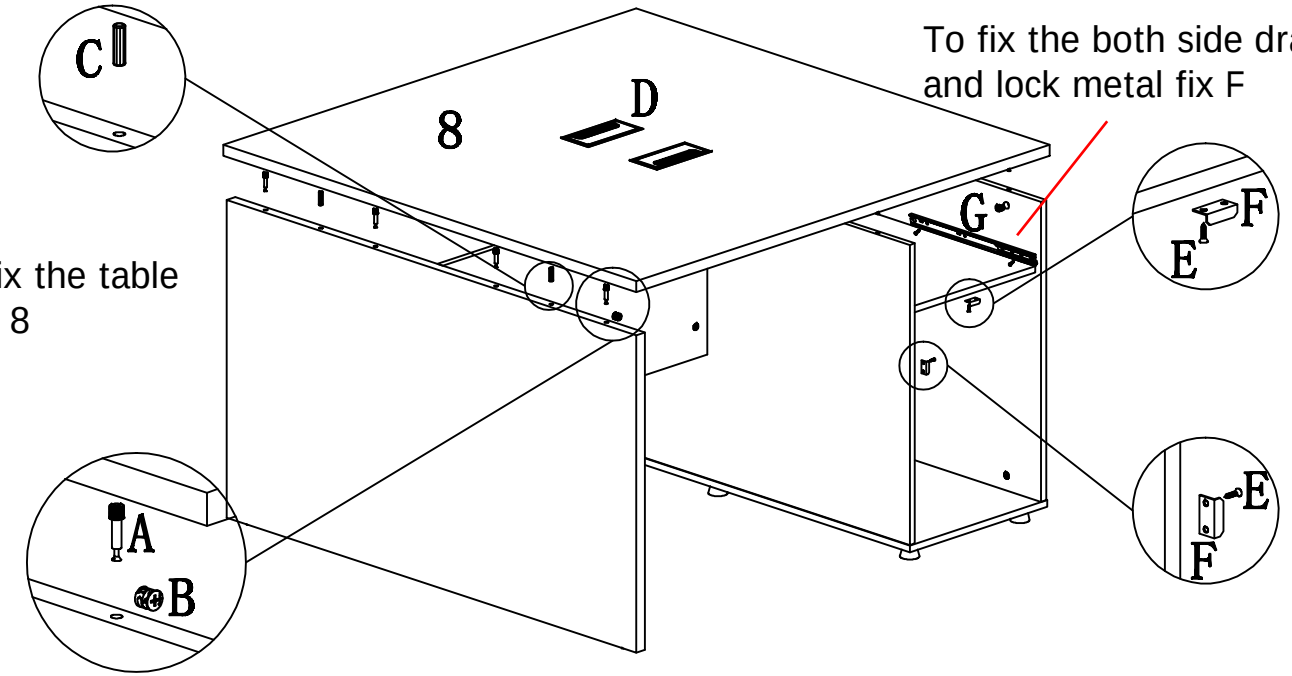


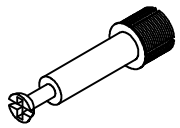

X8 A

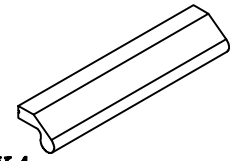

X4 I



X8 B

M*18




X8 J


3.5*14



X68 E

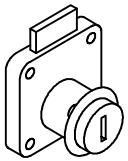

X4 K

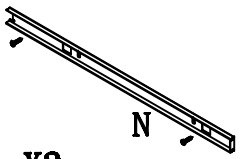



X2 N

4*20




X16 L

4*30

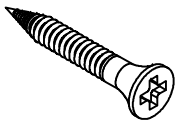


X8 H

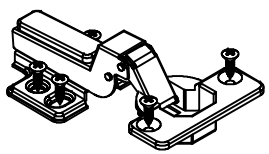


X4 M

STEP:3


To fix the panel 12,13,14

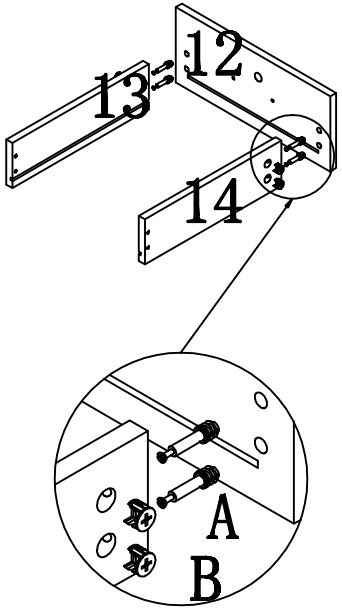



To put panel 15 inside and fix the panel 16

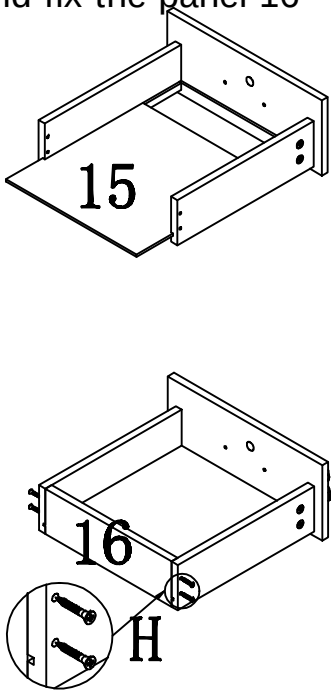



To fix the both side rail

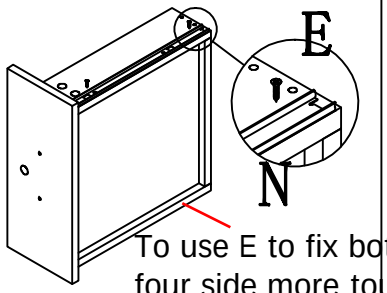


To use E to fix bottom panel four side more tough

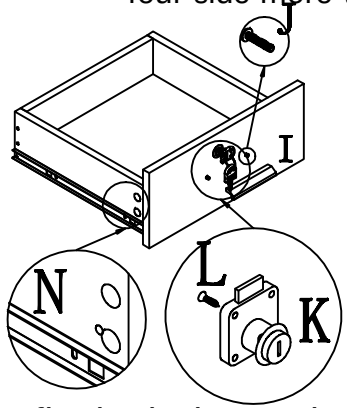


To fix the lock K and handle I

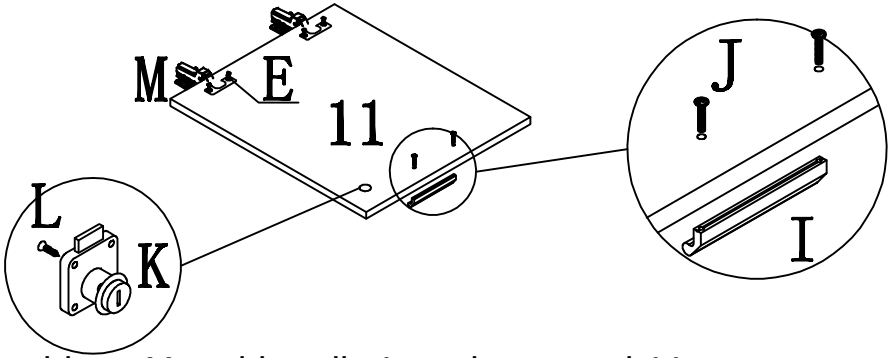


To fix the hinge M and handle I on door panel 11
Then to fix in cabinet

3.5*14



X16 E


4*20




X4 L



X2 O

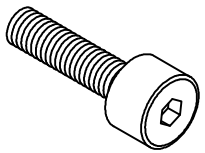


X2 P



X4 R

STEP:4

To fix the table top screen

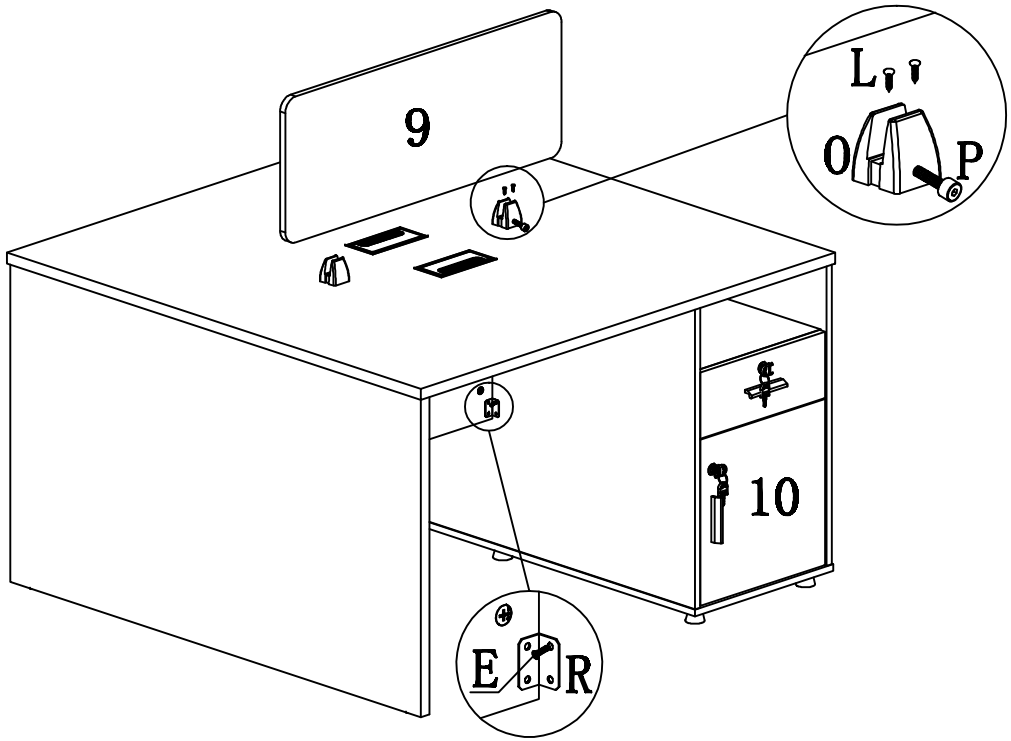


To use corner bracket metal fix R to fix middle panel both side more stable

FINISH