

361-000054

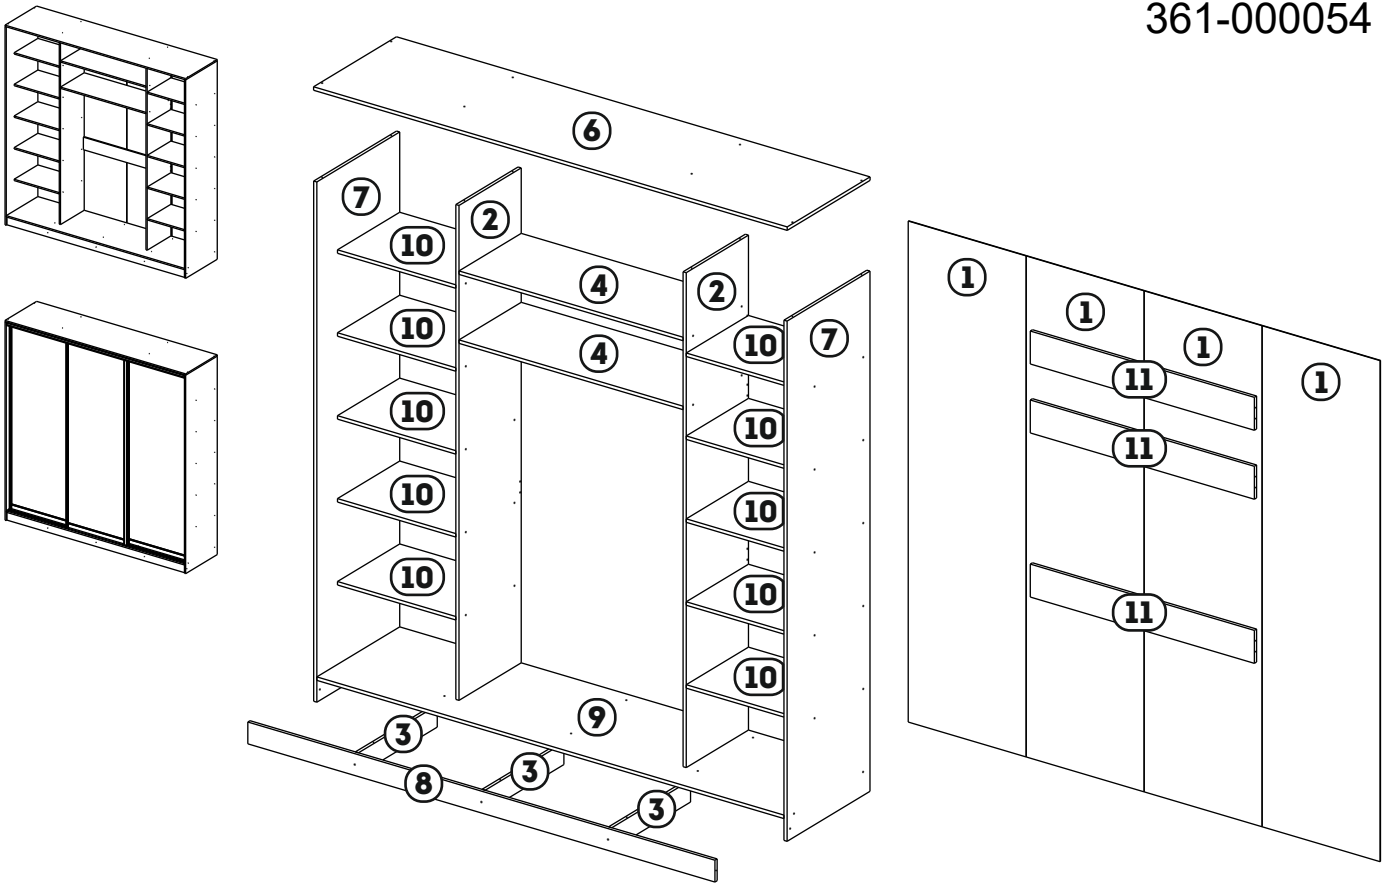

№	a*b	X	Pack
1	2296x598	4	1/7
2	2268x451	2	3/7
3	570x100	3	2/7
4	1136x451	2	4/7
6	2401x600	1	2/7
7	2384x600	2	1/7
8	2368x100	1	2/7
9	2368x600	1	2/7
10	600x451	6	3/7
10	600x451	4	2/7
11	1136x151	2	4/7
11	1136x151	1	2/7


*Sliding wardrobe doors comes in packs 5/7, 6/7 and 7/7.

Flange D25




x2 **D2**

Joining Strip




x3 **ZP**

Confirmat




x87 **A1**

Nail
1x16




x74 **K1**

Cap for confirmate




x87 **A2**

Screw
3,5x16



x6 **W1**

Support-lining



x10 **Q3**

Stopper




x2 **S3**

Confirmation Key





x1 **A3**


Pipe

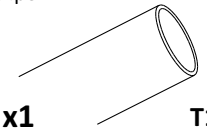

x1 **T1**

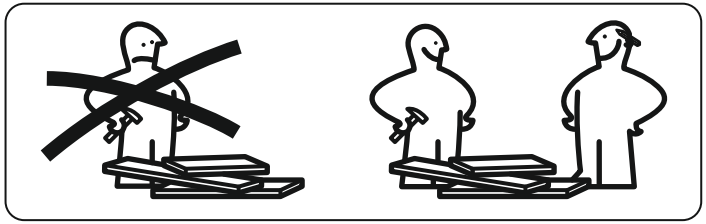

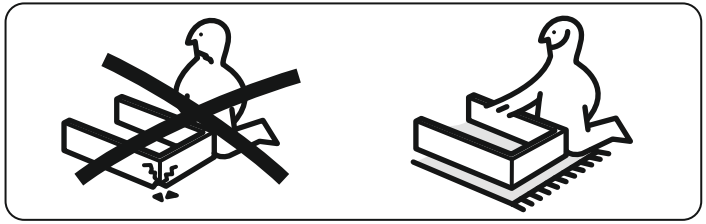

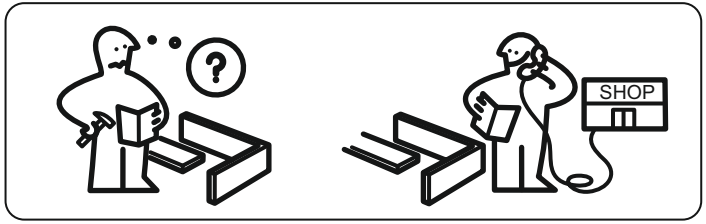


GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY


- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.


CARE AND MAINTENANCE OF FURNITURE


- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.

1

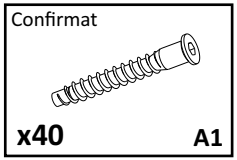

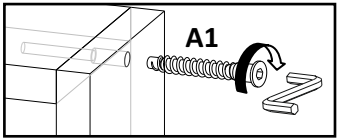


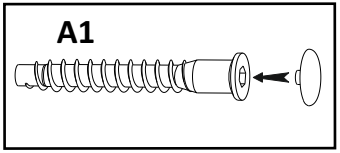

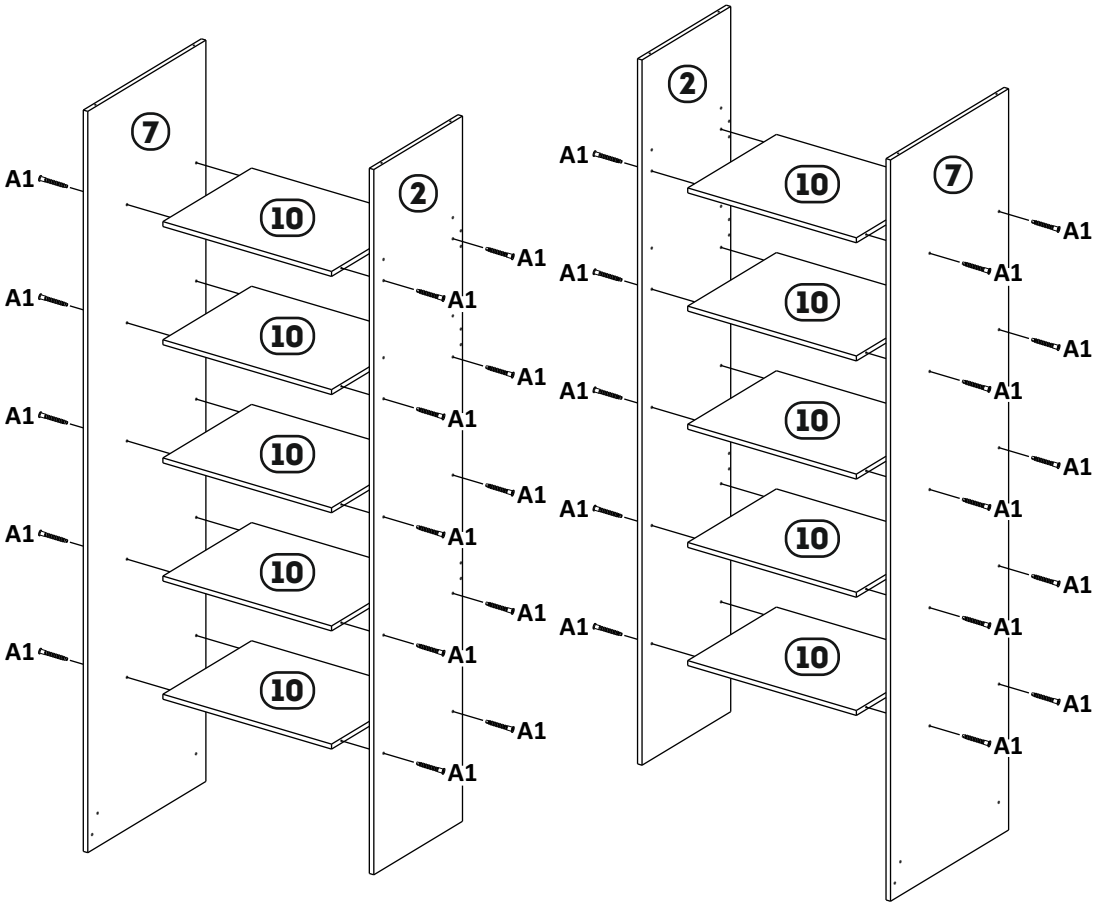



2

Confirmat




x9 A1

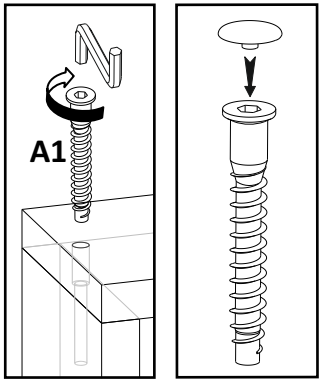

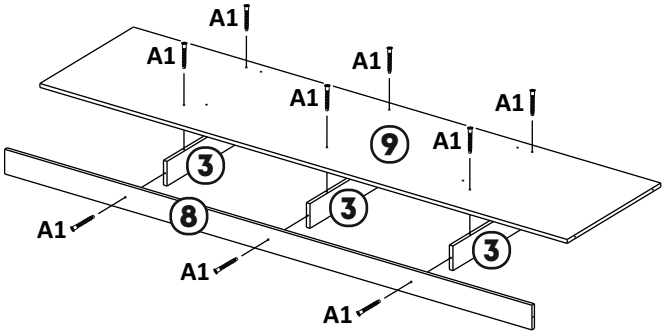


3

Confirmat




x18 A1

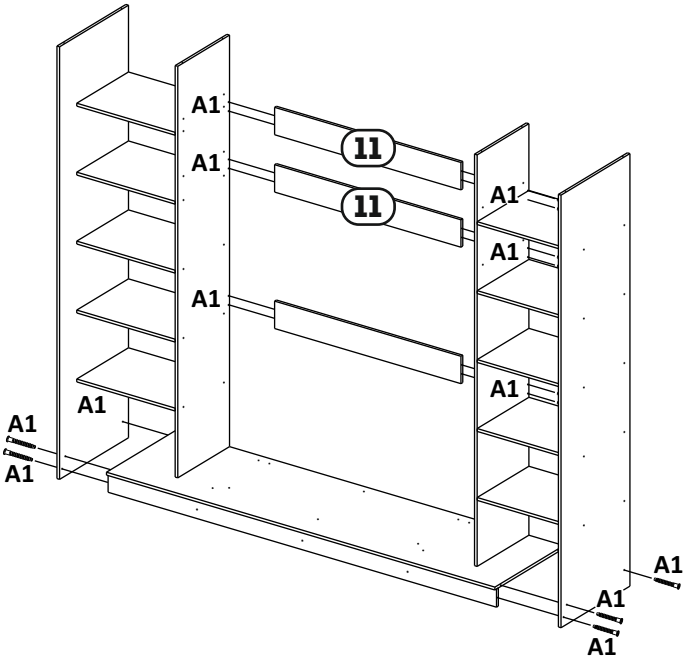


4

Confirmat



x20 **A1**

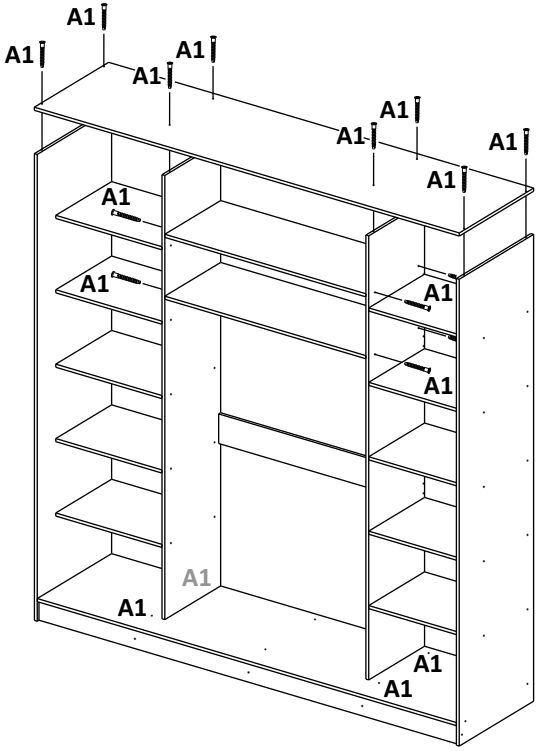


5

Support-lining





x10 **Q3**


Nail
1x16



x74 **K1**

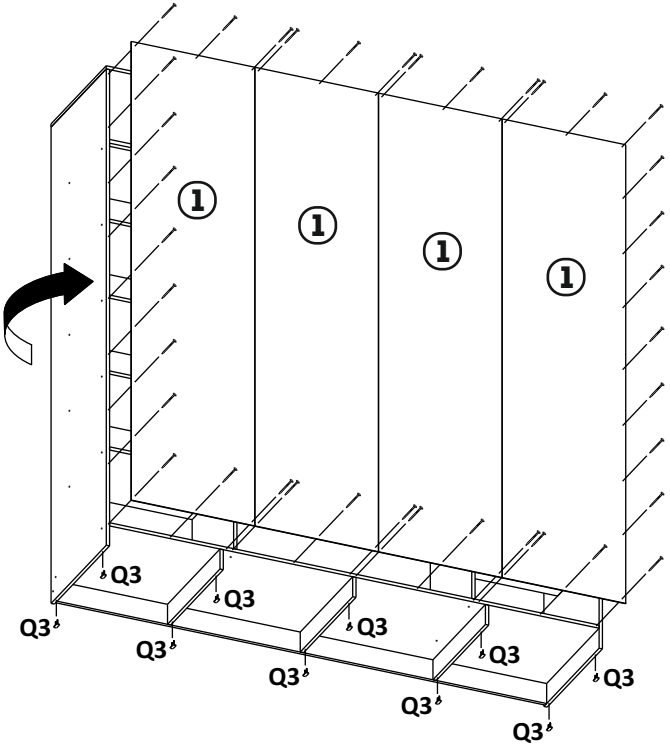

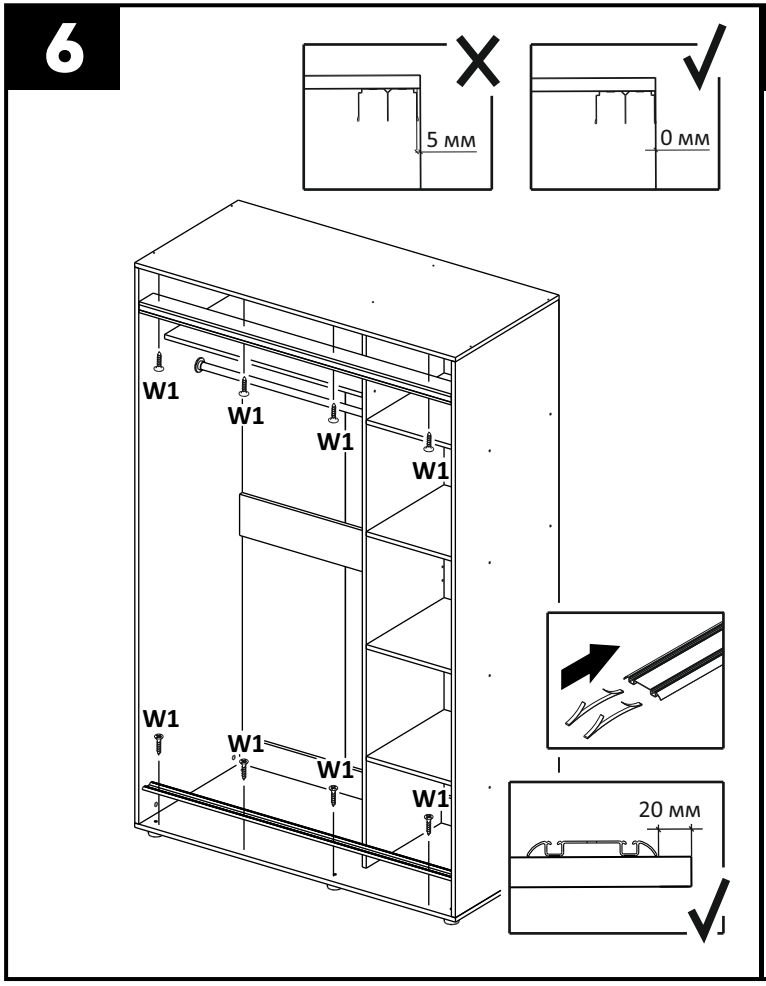
6
5 мм
0 мм
W1
W1
W1
W1
W1
W1
W1
W1
20 мм

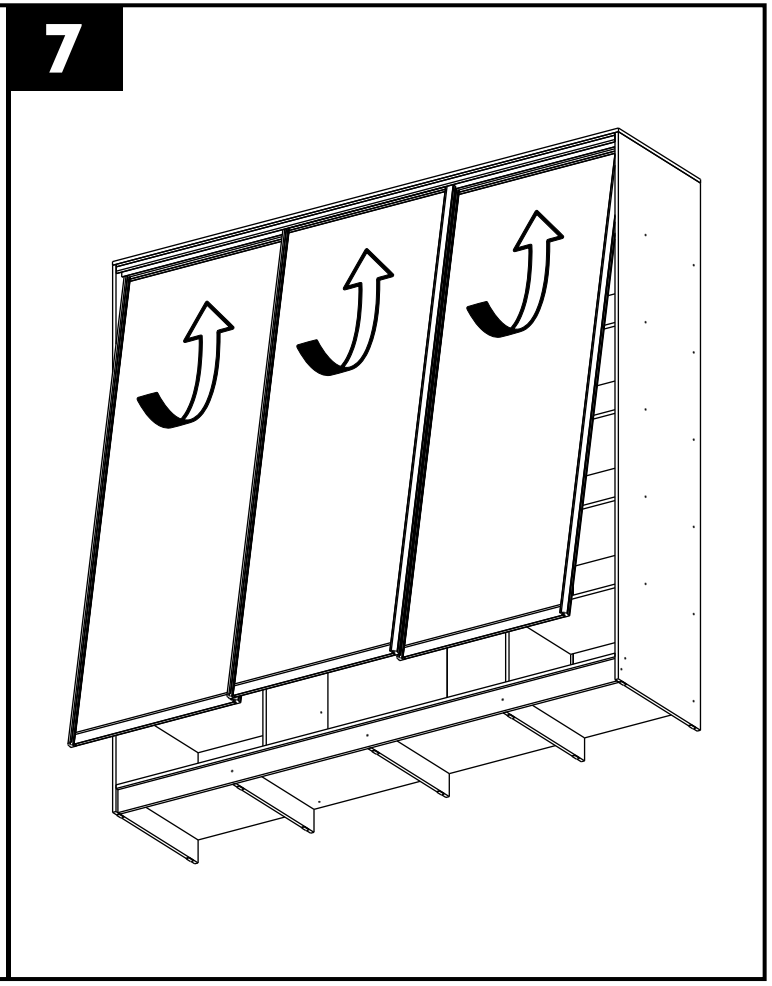
7

