


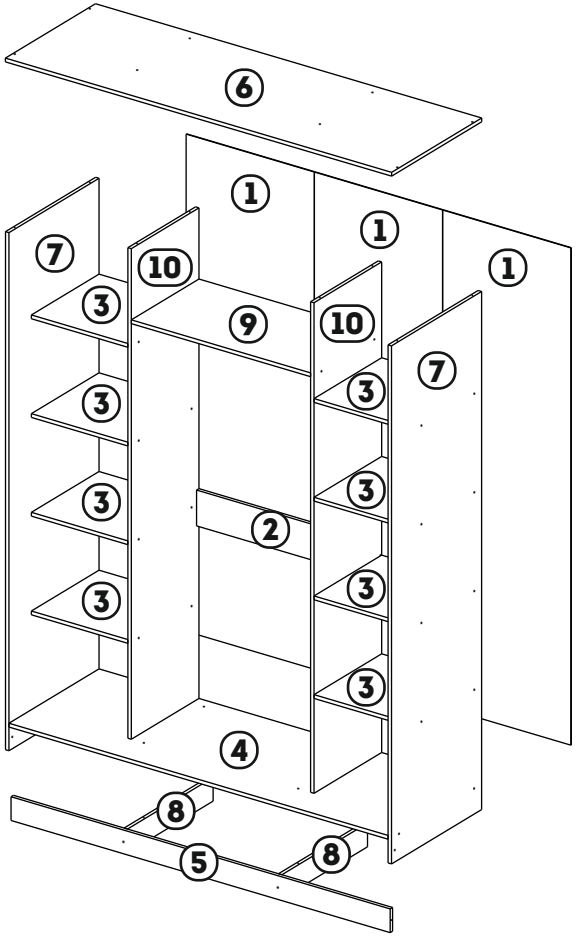


361-000053

№	a*b	X	Pack
1	2096x598	3	1/5
2	836x151	1	2/5
3	450x451	8	3/5
4	1768x600	1	2/5
5	1768x100	1	2/5
6	1801x600	1	2/5
7	2184x600	2	1/5
8	570x100	2	2/5
9	836x451	1	2/5
10	2068x451	2	3/5


*Sliding wardrobe doors comes in packs 4/5 and 5/5.

Flange D25




x2 **D2**

Joining Strip




x2 **ZP**

Confirmat




x64 **A1**

Nail
1x16




x62 **K1**

Cap for confirmate




x64 **A2**

Screw
3,5x16



x6 **W1**

Support-lining



x8 **Q3**

Stopper




x2 **S3**

Confirmation Key





x1 **A3**


Pipe

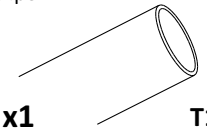

x1 **T1**

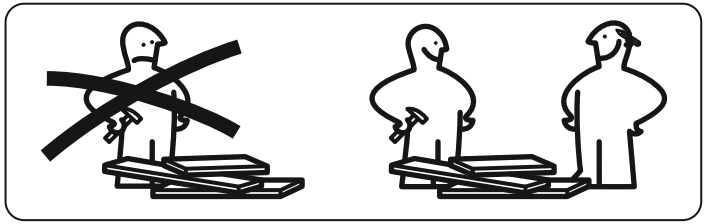

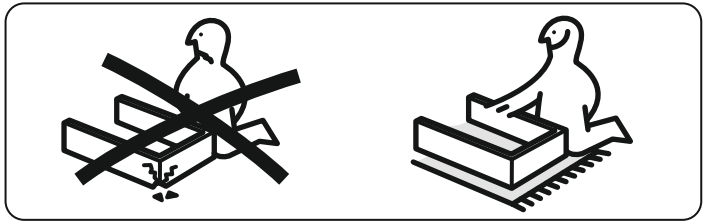

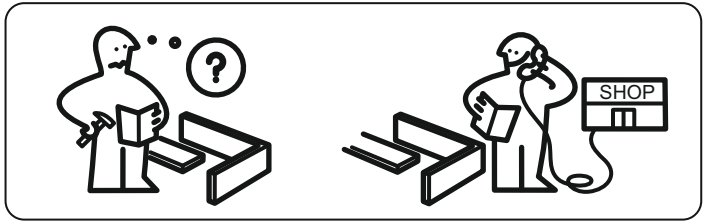


GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY


- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.


CARE AND MAINTENANCE OF FURNITURE


- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.


1

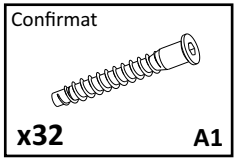

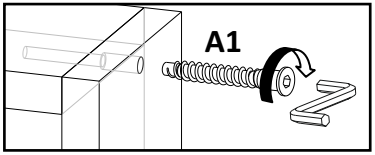

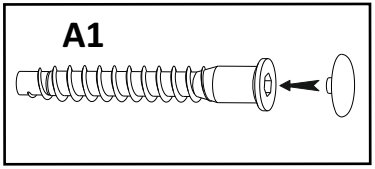


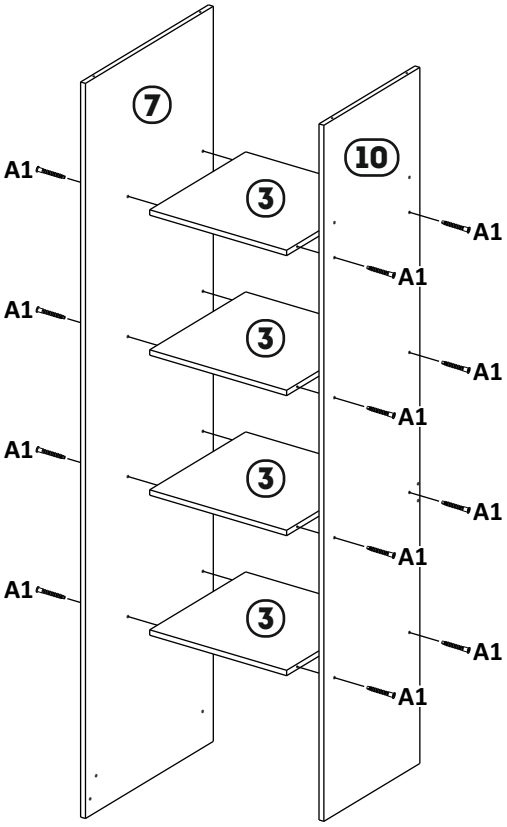

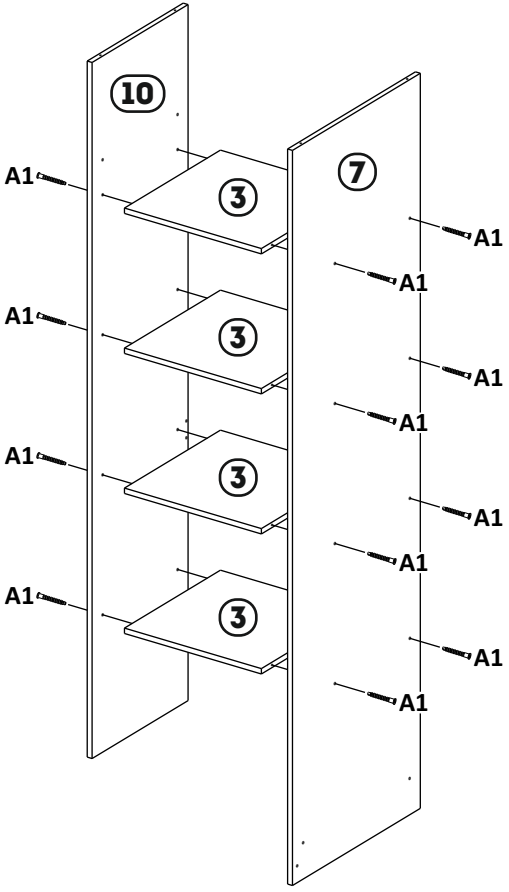



2


Confirmat



x6 A1

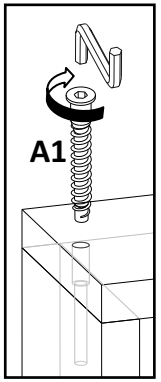


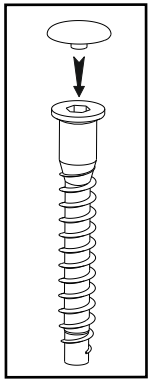

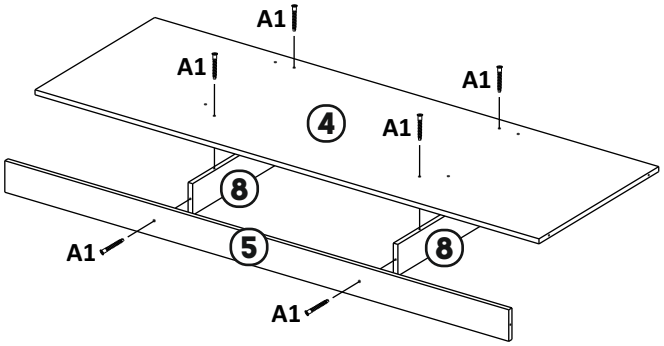


3

Confirmat




x14 A1

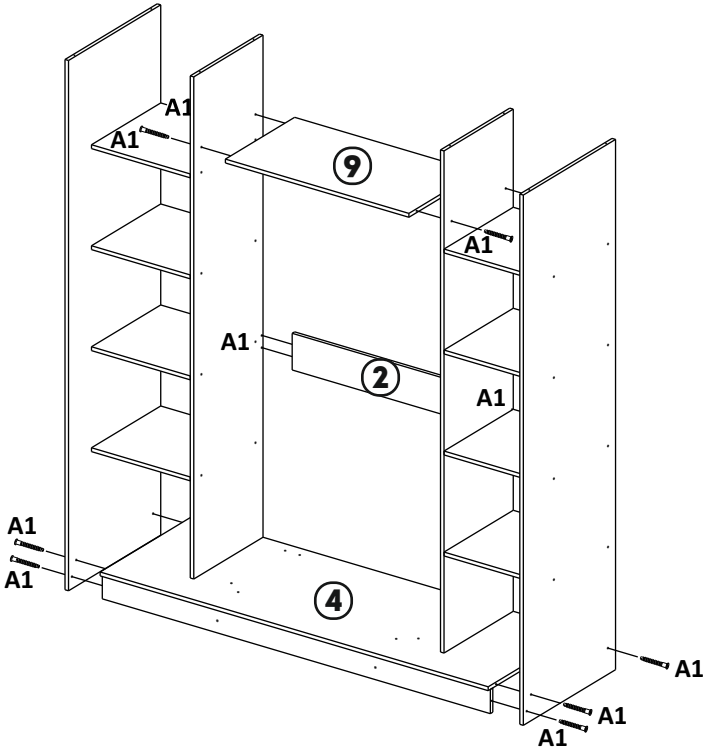


4

Confirmat




x12 A1

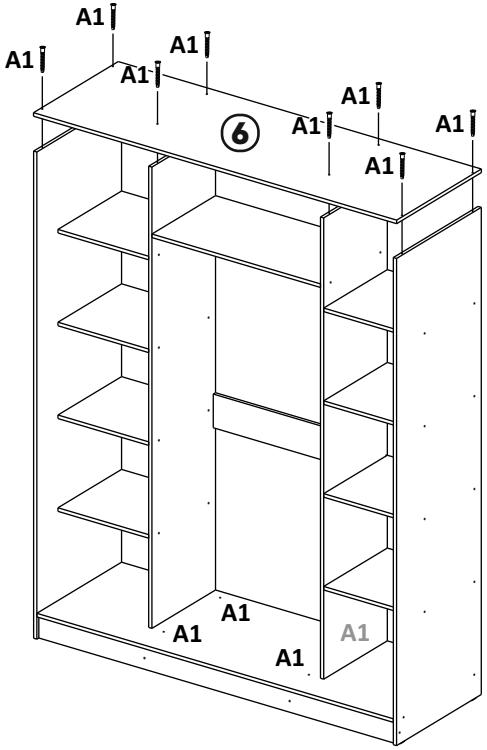


5

Support-lining




x8 Q3


Nail
1x16




x62 K1

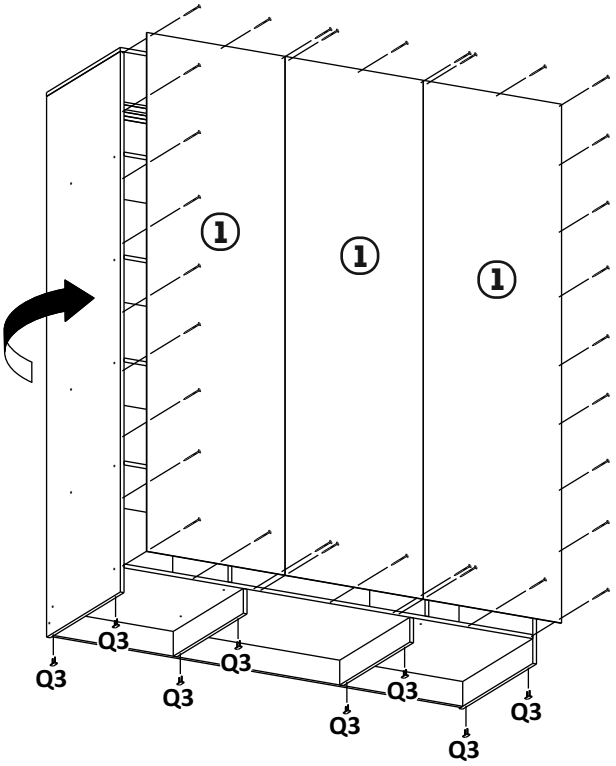

6

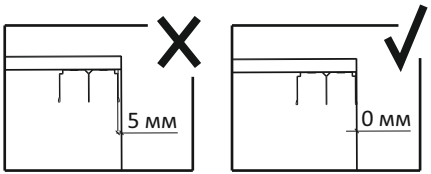

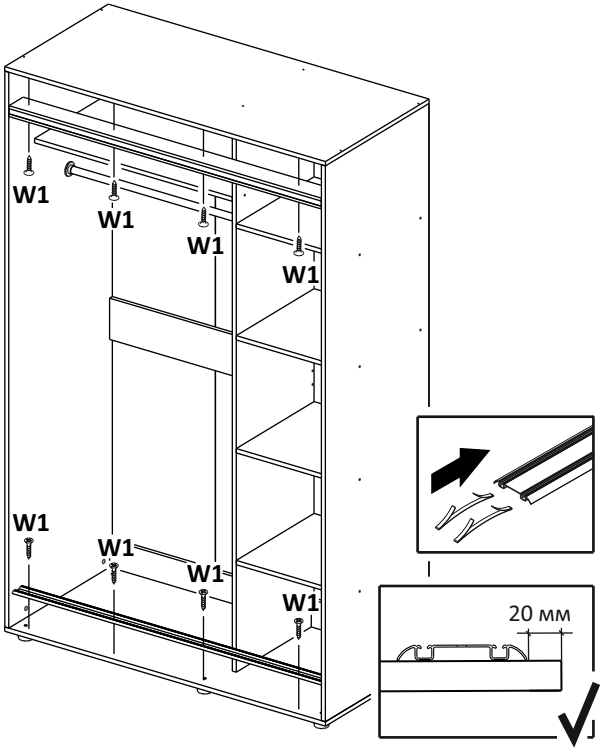

7

