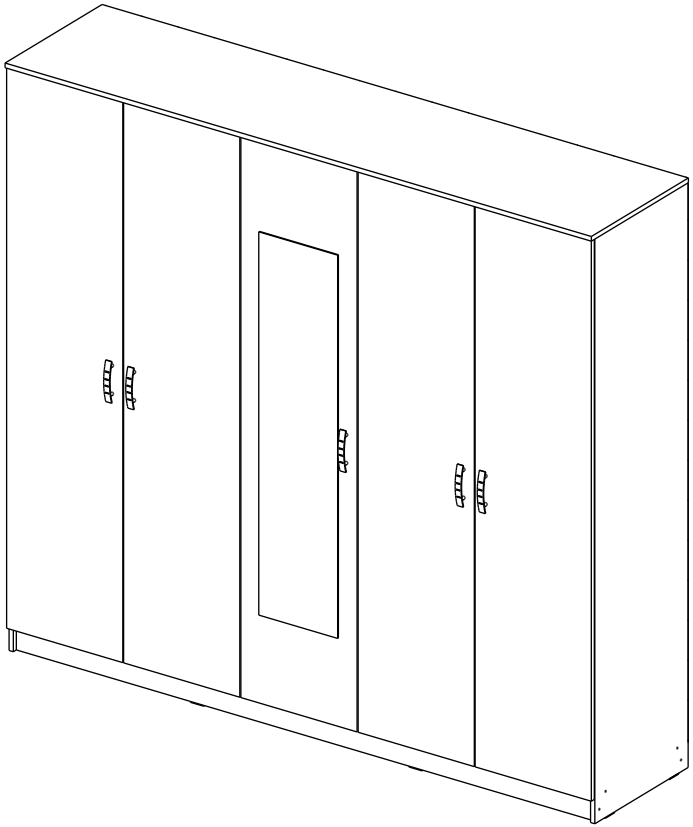
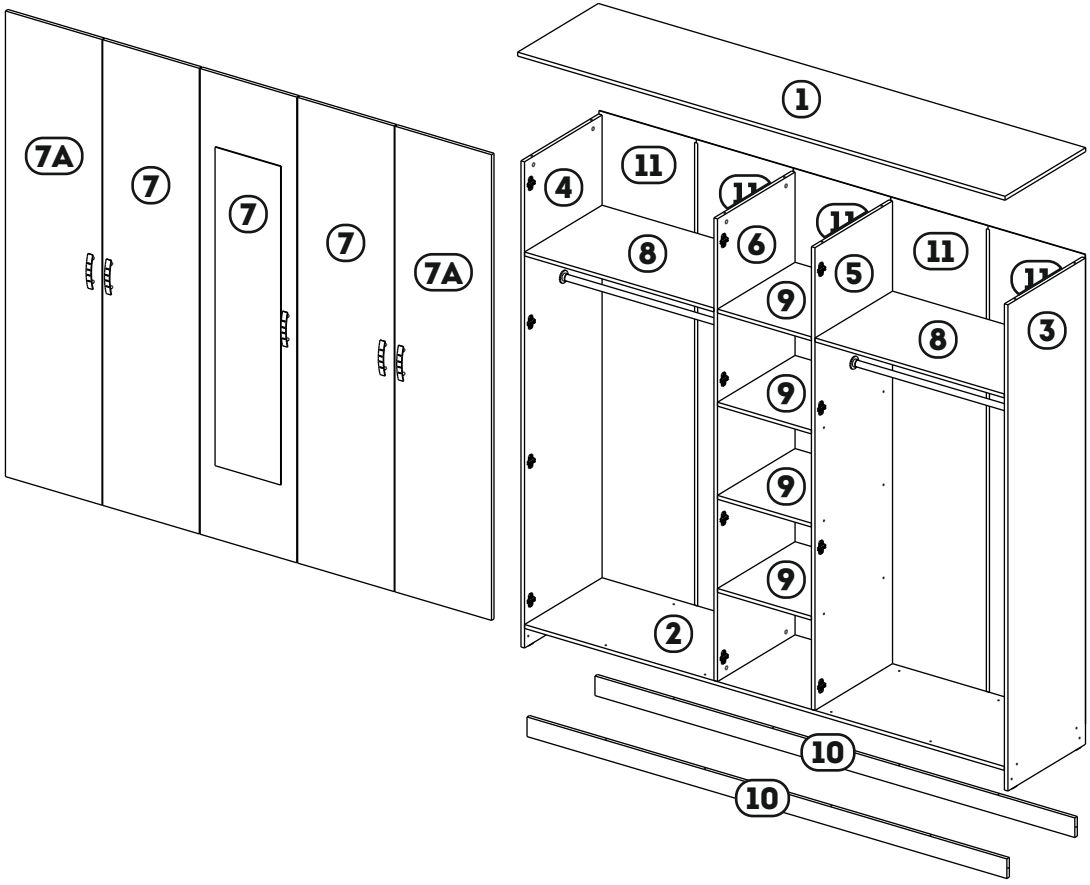
pakketo

361-000057






7A
7
7
7
7A
1
4
11
11
11
11
8
6
5
9
8
3
9
9
9
2
10
10


№	a*b	X	Pack
1	2200x520	1	5/5
2	2166x500	1	5/5
3	1984x500	1	3/5
4	1984x500	1	3/5
5	1888x500	1	4/5
6	1888x500	1	4/5
7	1900x436	3	1/5
7	1900x436	2	2/5
8	855x500	2	4/5
9	424x500	4	4/5
10	2166x80	2	5/5
11	1916x438	5	3/5


Minifix


x12 **M1**


Flange D25

x4 **D2**


Full Overlay Hinge

x8 **P5**


Half Overlay Hinge

x12 **P7**


Minifix Screw

x12 **M2**


Mounting Plate

x20 **P6**


Confirmat

x32 **A1**


Screw
3,5x16

x106 **W1**

Rear Panel Fixing Screw

x14 **K3**

Screw
4x30

x10 **W3**


Nail
1x16

x64 **K1**

Cap for confirmate

x32 **A2**

Plastic Handle
96 мм

x5 **RP 1**


Support-lining


x8 **Q3**


Cap for Minifix

x12 **M3**

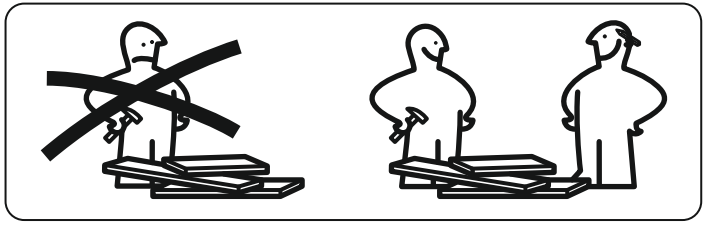
Confirmation Key

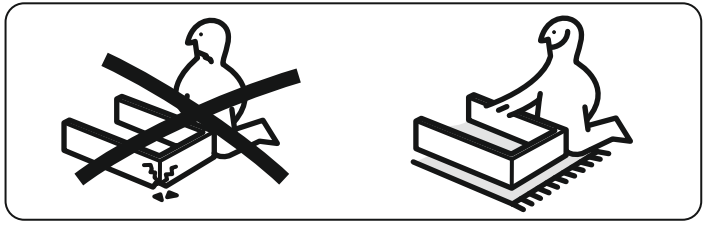

x1 **A3**

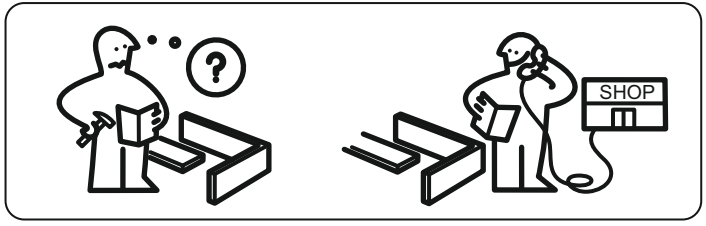
Joining Strip

x2 **ZP**

Rafix

x8 **R1**

Rafix Screw

x8 **R2**







GENERAL TECHNICAL INSTRUCTIONS FOR FURNITURE ASSEMBLY


- CHECK COMPATIBILITY OF PARTS AND ACCESSORIES BEFORE ASSEMBLY.
- FOR FURNITURE ASSEMBLY, WE RECOMMEND USING THE SERVICES OF QUALIFIED SPECIALISTS.
- DO ASSEMBLY ON A SURFACE COVERED WITH CLOTH OR CARDBOARD TO PREVENT SCRATCHES.

CARE AND MAINTENANCE OF FURNITURE

- KEEP THE FURNITURE FROM PROLONGED CONTACT WITH WATER OR HOT STEAM.
- ENSURE SUFFICIENT DISTANCE FROM ELECTRICAL APPLIANCES AND HEATERS.
- IF THERE IS DIRTY ON THE FURNITURE, REMOVE IT WITH A DAMP CLOTH AND THEN WIPE IT DRY. DO NOT USE ABRASIVE MATERIALS.


1

Mounting Plate



x20 P6

Rafix Screw




x8 R2

Minifix




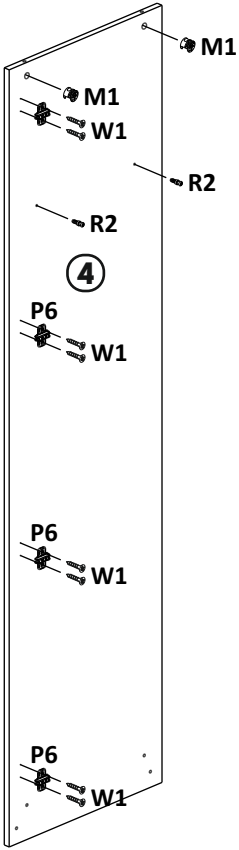
x12 M1

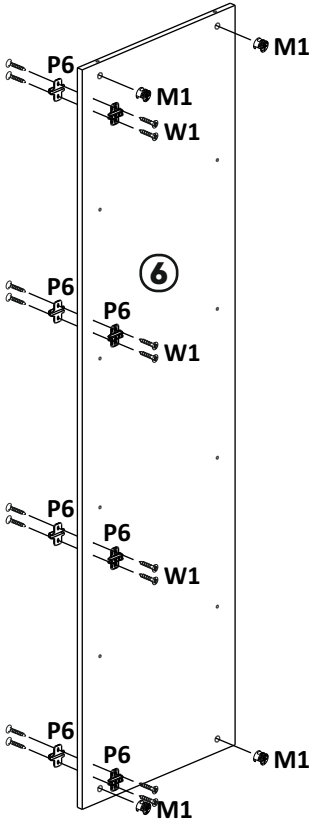
Screw
3,5x16

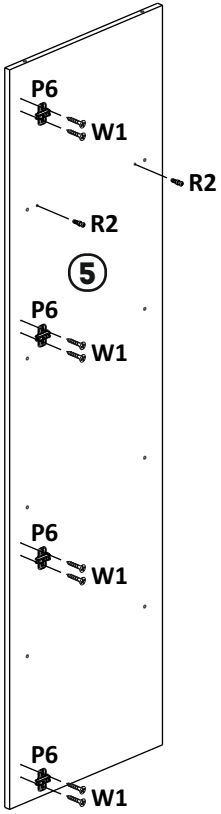


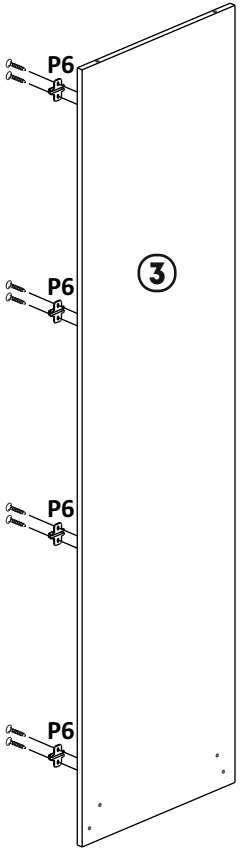
x40 W1



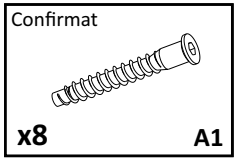


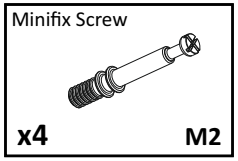


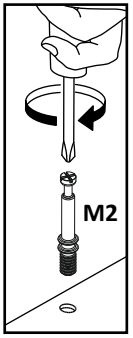


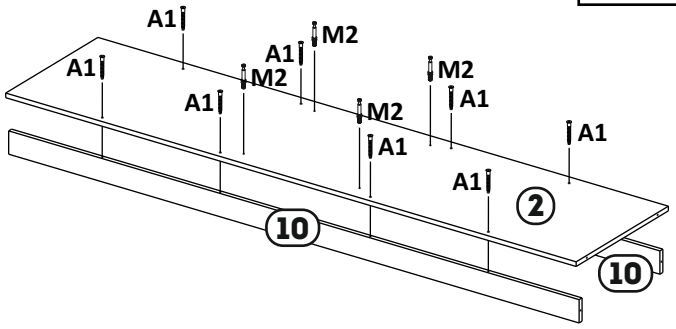


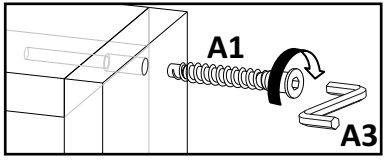
2

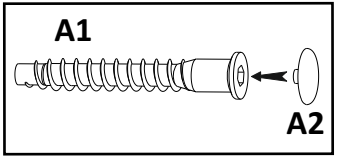

Confirmat
x8
A1


Minifix Screw
x4
M2

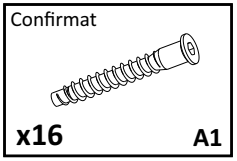

M2

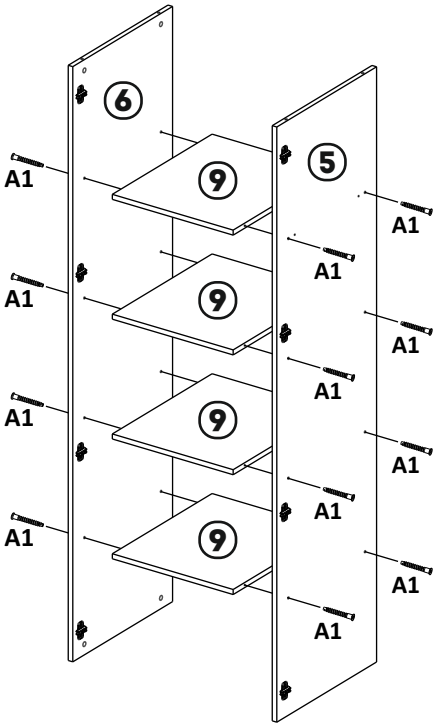

A1
A1
A1
M2
A1
M2
M2
A1
M2
A1
A1
A1
2
10
10


A1
A3

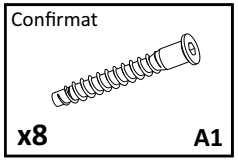

A1
A2

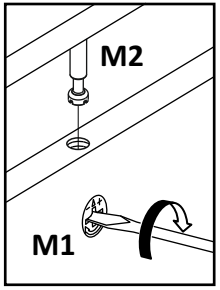
3

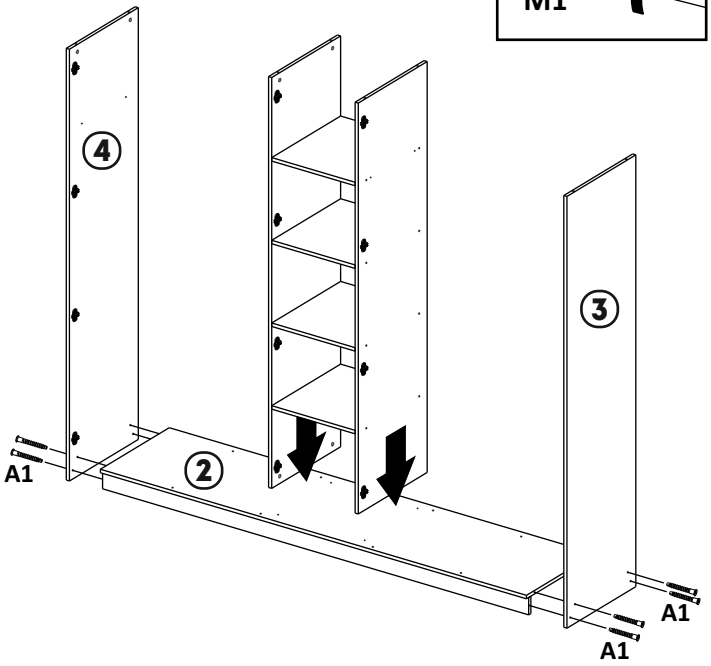

Confirmat
x16
A1


6
5
9
9
9
9
A1
A1
A1
A1
A1
A1
A1
A1
A1
A1
A1
A1

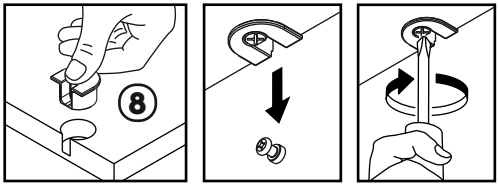
4

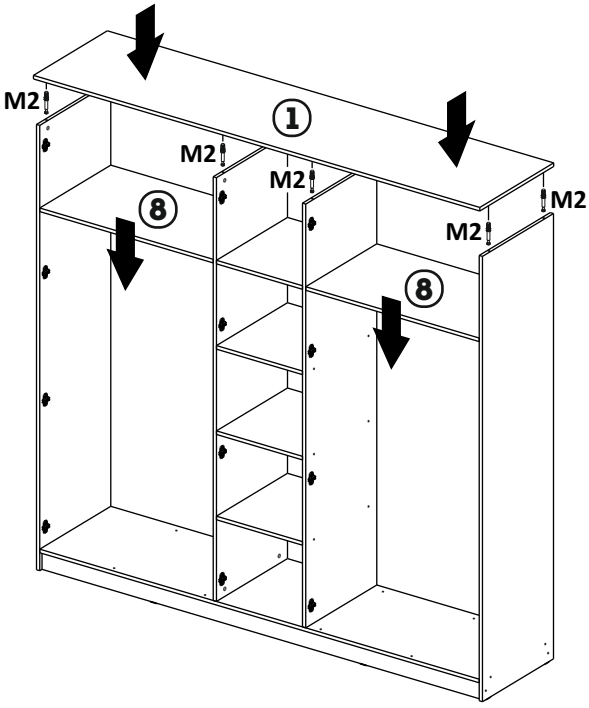







5



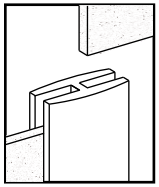


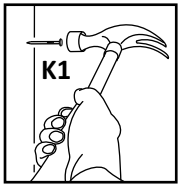
6

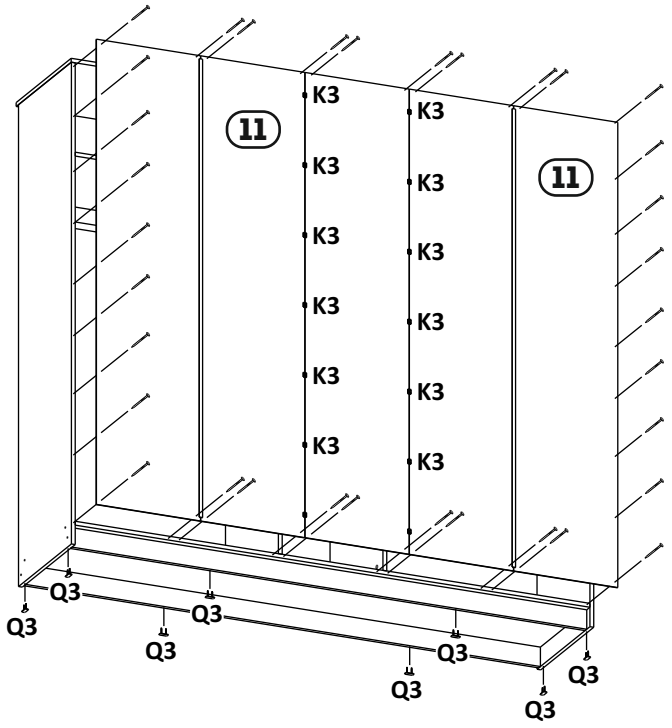
Rear Panel Fixing Screw



x14 K3









7

Full Overlay Hinge

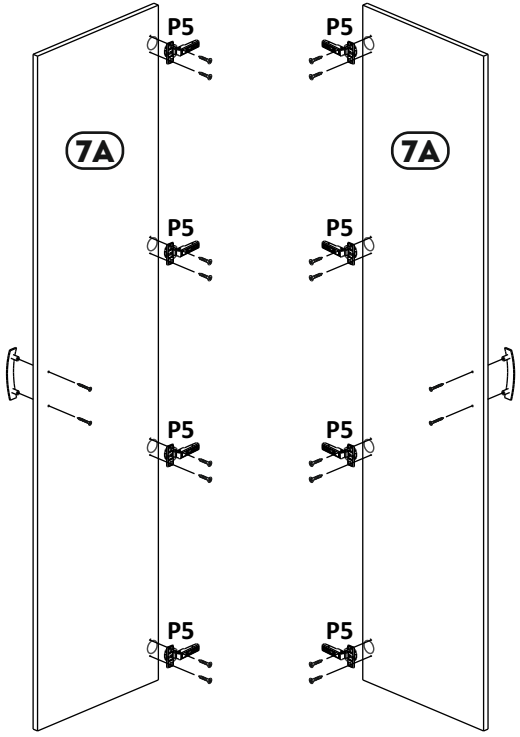


x10 P5

Screw
3,5x16




x20 W1




8

Half Overlay Hinge

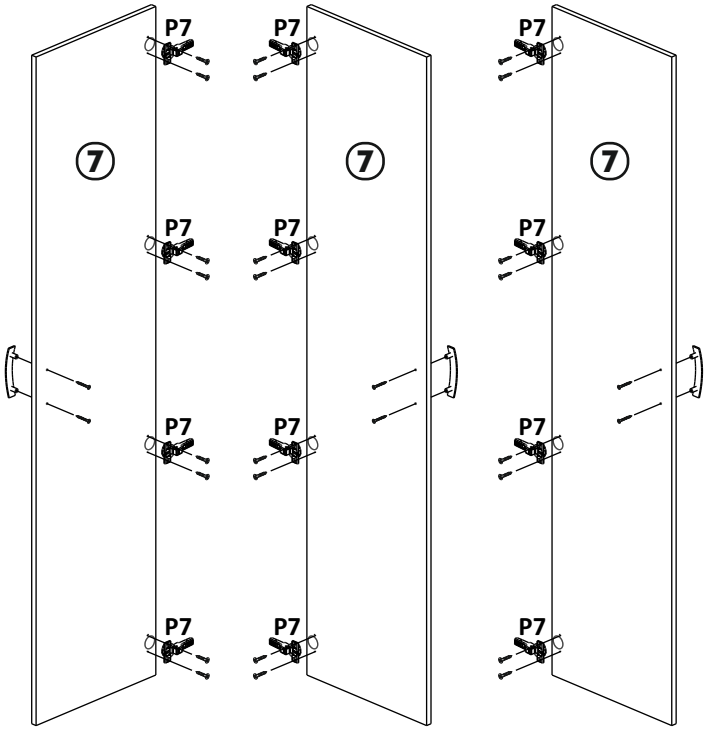


x12 P7

Screw 3,5x16



x24 W1



9

