














246-000015


| | | |
|---|---|---|
| Minifix Screw  X74 A | Screw 4*30  X4 F | Full overlay hinge  X2 K |
| Minifix  X74 B | Drawer rail  X1 G | Handle  X2 L |
| Wood Minifix  X12 C | Lock  X1 H | M4*18 Handle screw  X4 M |
| Shelves fix screw  X4 D | Screw 4*20  X4 I | Wire box  X1 N |
| Screw 3.5*14  X24 E | Lock metal fix  X1 J | Wire box  X1 O |

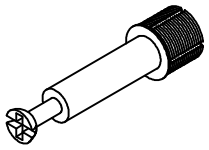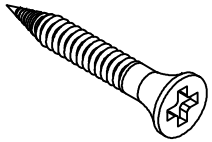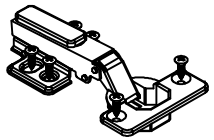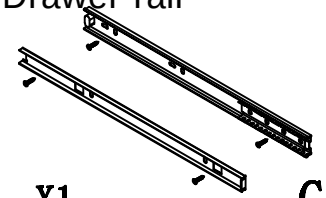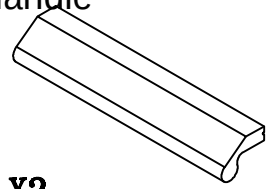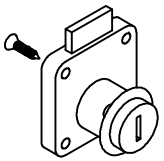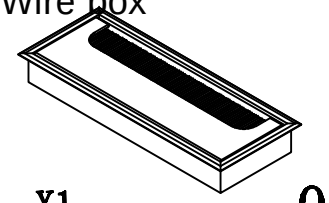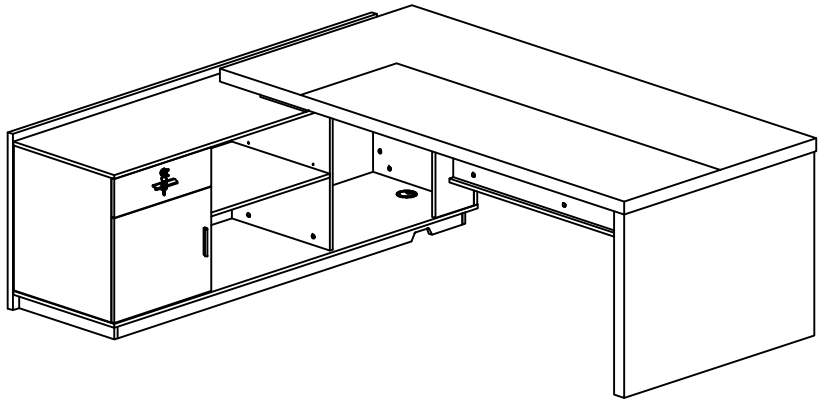

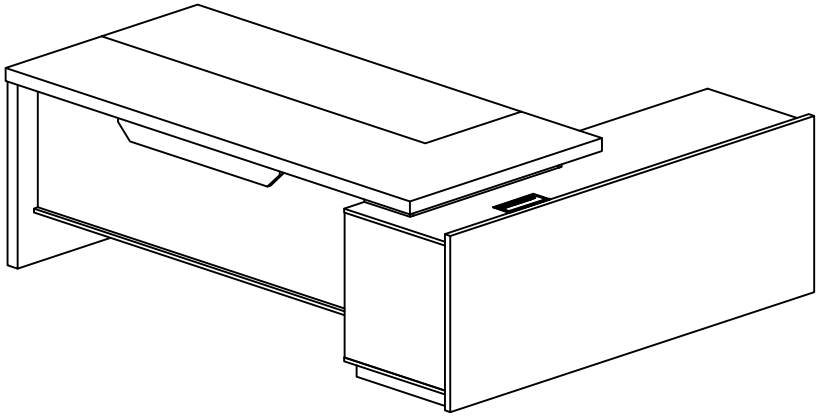


KM-109-L


(2200 × 1050 × 760)

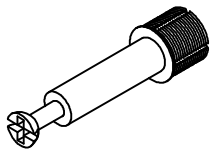

X28 A




X28 B

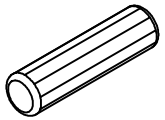

X8 C


STEP:1

To fix the back panel 1 and support panel 2 and 3

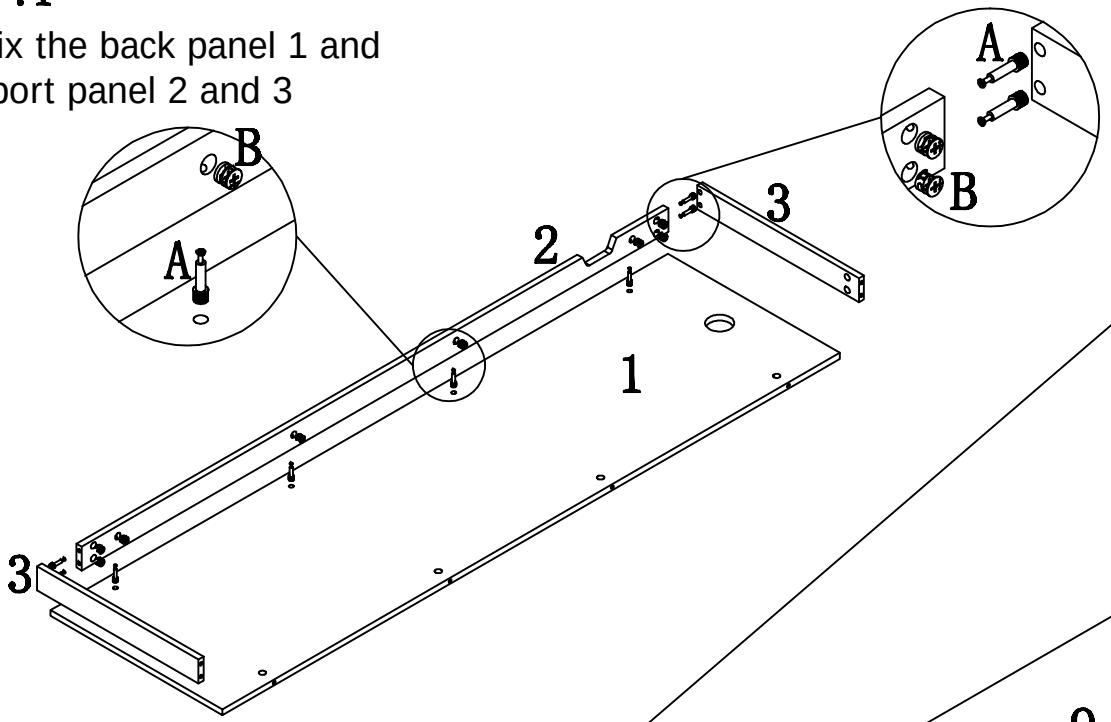



First


Second

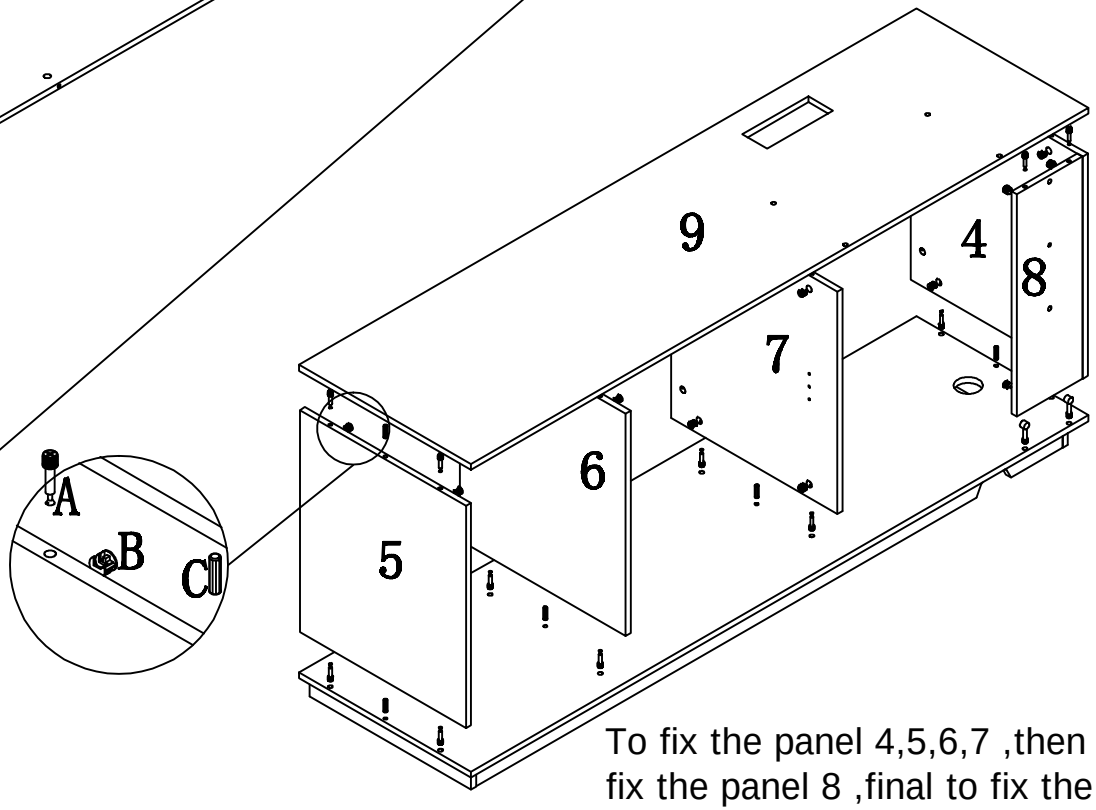



To fix the panel 4,5,6,7 ,then to fix the panel 8 ,final to fix the top panel 9

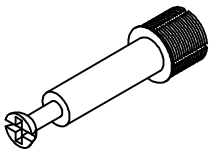


X20 A

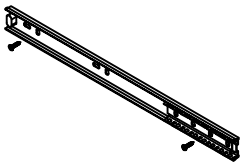

X1 G



X20 B

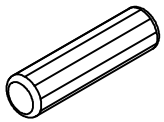

X4 C



X4 D


3.5*14



X6 E


STEP:2

To fix the back panel 10

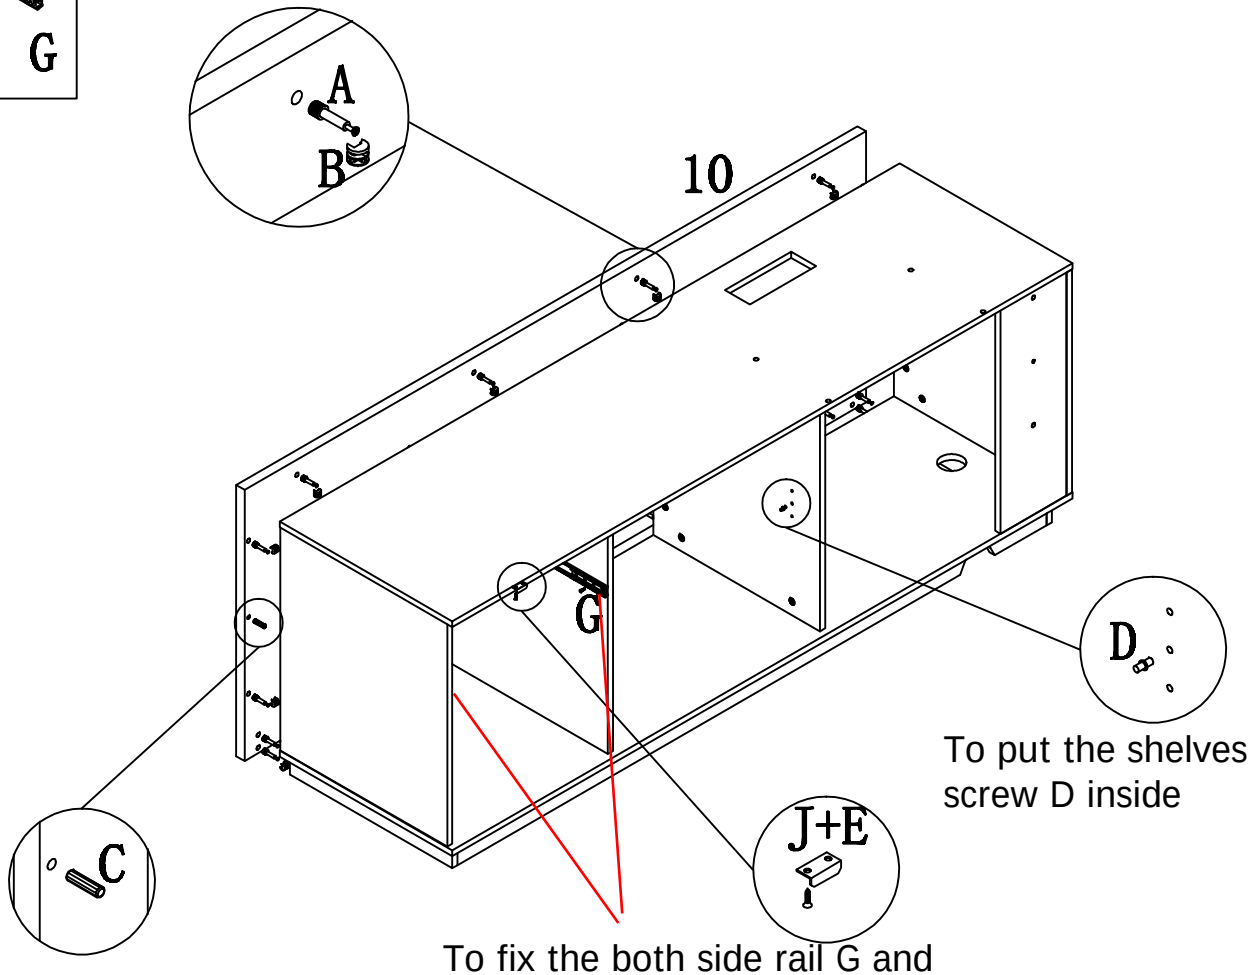



To put the shelves fix screw D inside

To fix the both side rail G and fix the lock metal minifix J

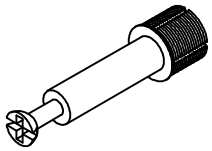


X4 A

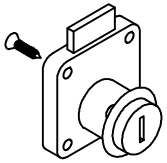


X1 H

M4*18




X4 M



X4 B

4*20




X4 I

3.5*14




X18 E




X1 J


4*30

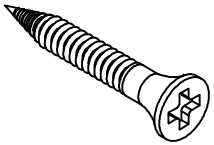


X4 F

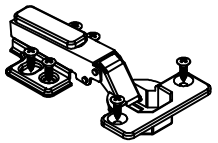

X2 K

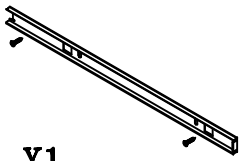

X1 G

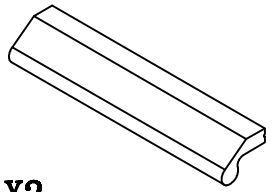



X2 L


STEP:3

To put the panel 14 inside and fix the panel 15


To fix the panel 11,12,13

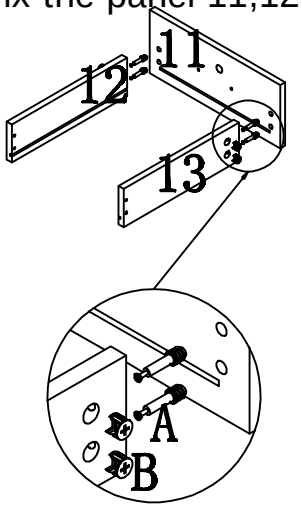

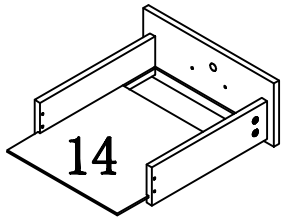


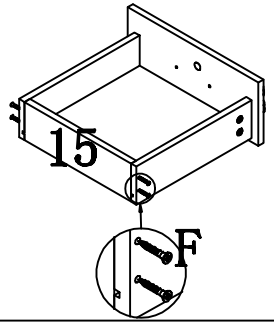
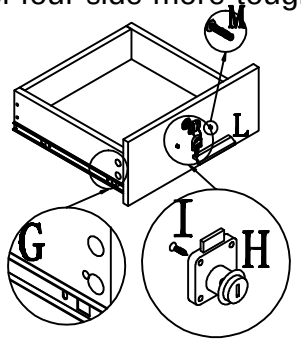

To fix the hinge K on door panel 16 and fix the handle L ,then to fix in cabinet

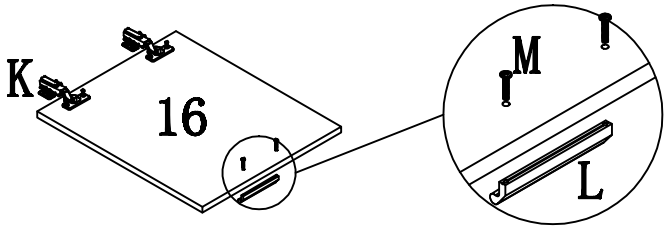



To fix the both side rail G

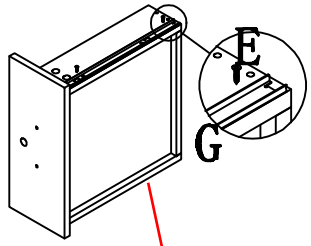



To use screw E to fix bottom panel four side more tough





To fix the lock H and handle L

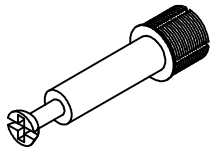

X16 A




X16 B




X1 N


## STEP:4

To fix the front panel 20 and 21

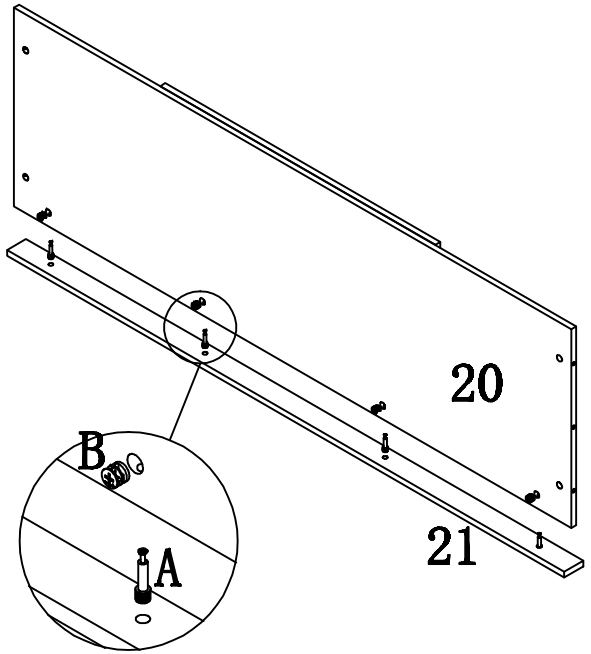



To fix the side table support panel 18 and 19

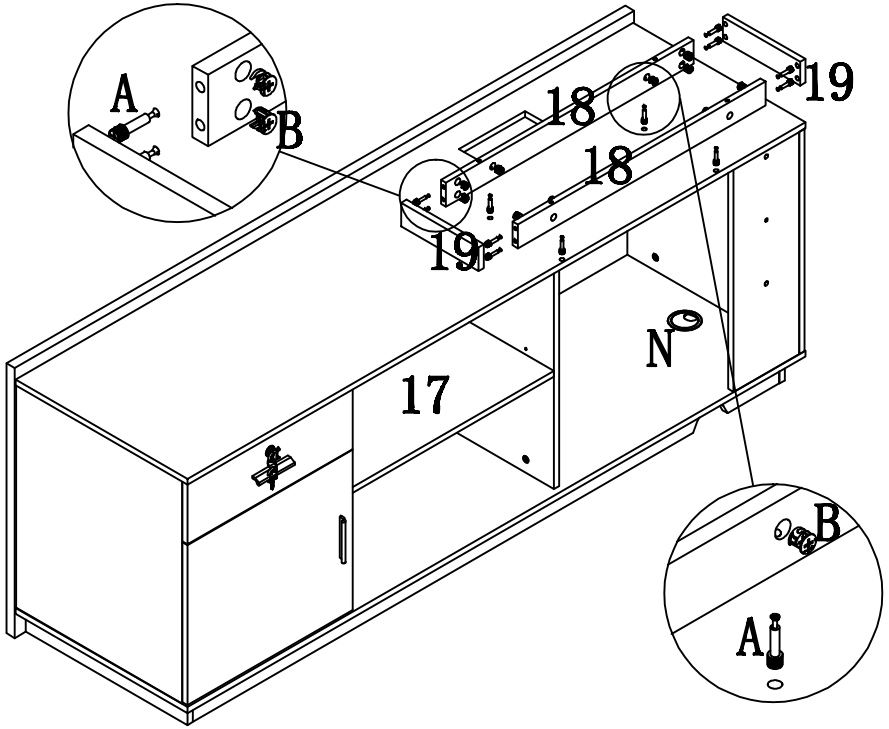


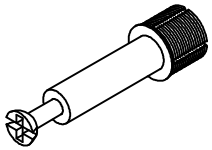

X4 A




X4 B

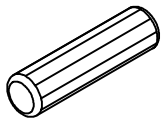


X2 C


## STEP:5

To fix the front panel and side table and leg panel 22

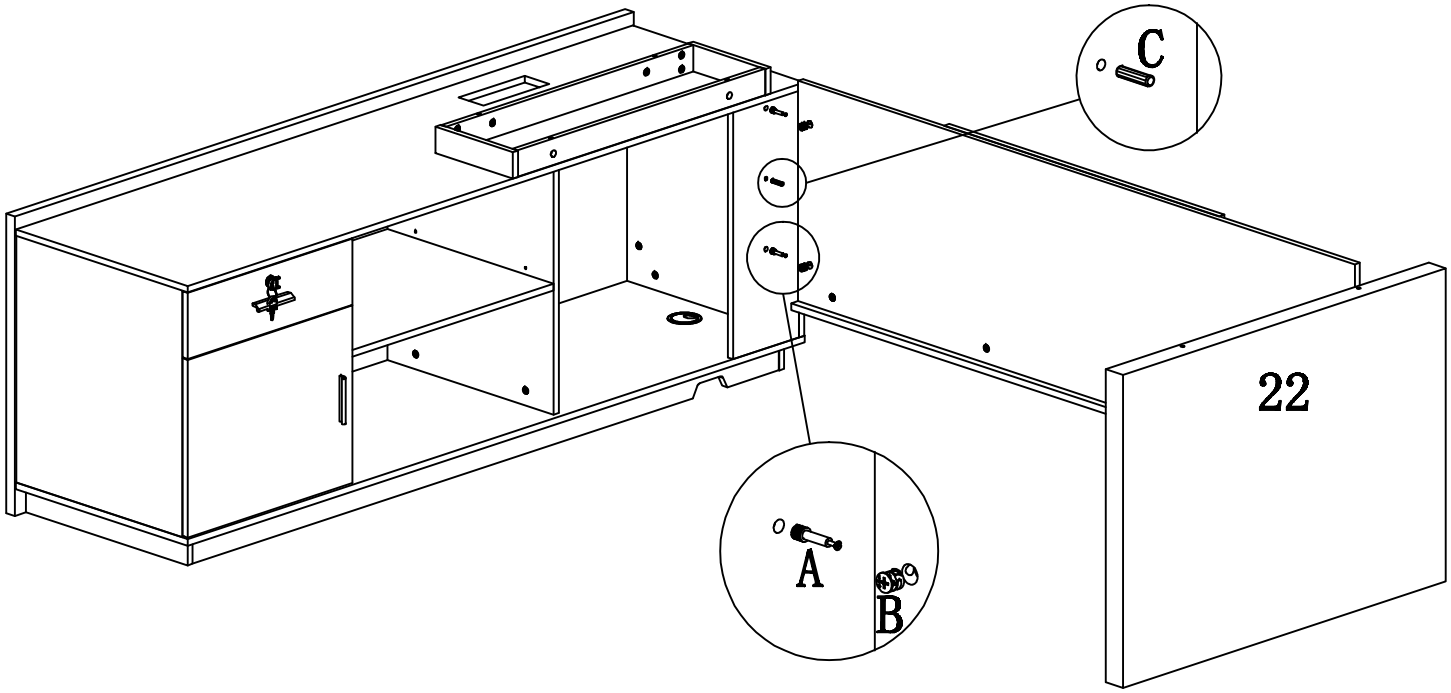


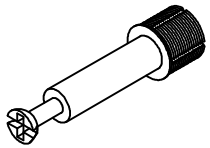

X6 A



X6 B

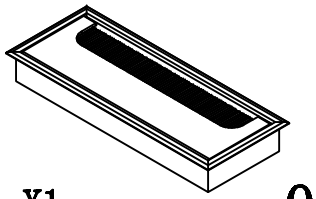

X1 O

## STEP:6

To fix the table top panel 23

FINISH

