













246-000014

Minifix Screw  X74 A	Screw 4*30  X4 F	Full overlay hinge  X2 K
Minifix  X74 B	Drawer rail  X1 G	Handle  X2 L
Wood Minifix  X12 C	Lock  X1 H	M4*18 Handle screw  X4 M
Shelves fix screw  X4 D	Screw 4*20  X4 I	Wire box  X1 N
Screw 3.5*14  X24 E	Lock metal fix  X1 J	Wire box  X1 O

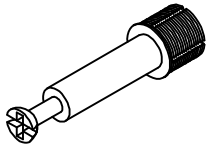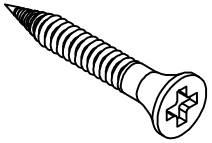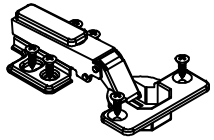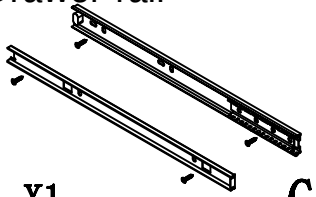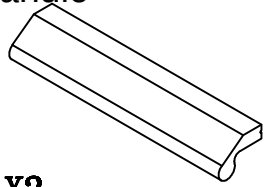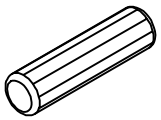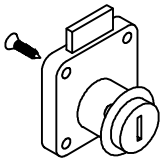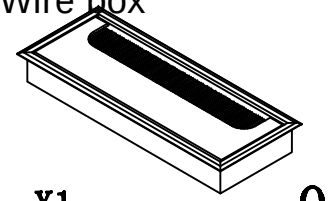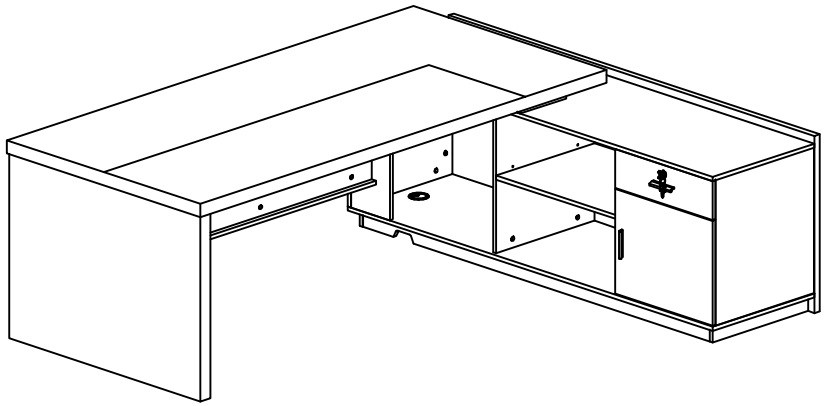


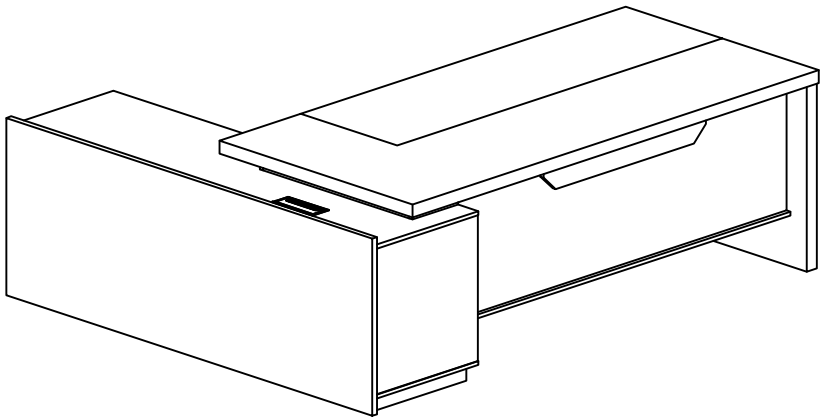


KM-109-R

(2200 × 1050 × 760)


STEP:1

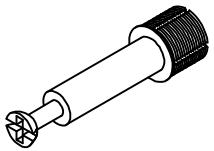

X28 A




X28 B

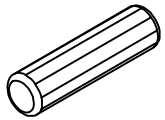

X8 C


First


To fix the back panel 1 and support panel 2 and 3

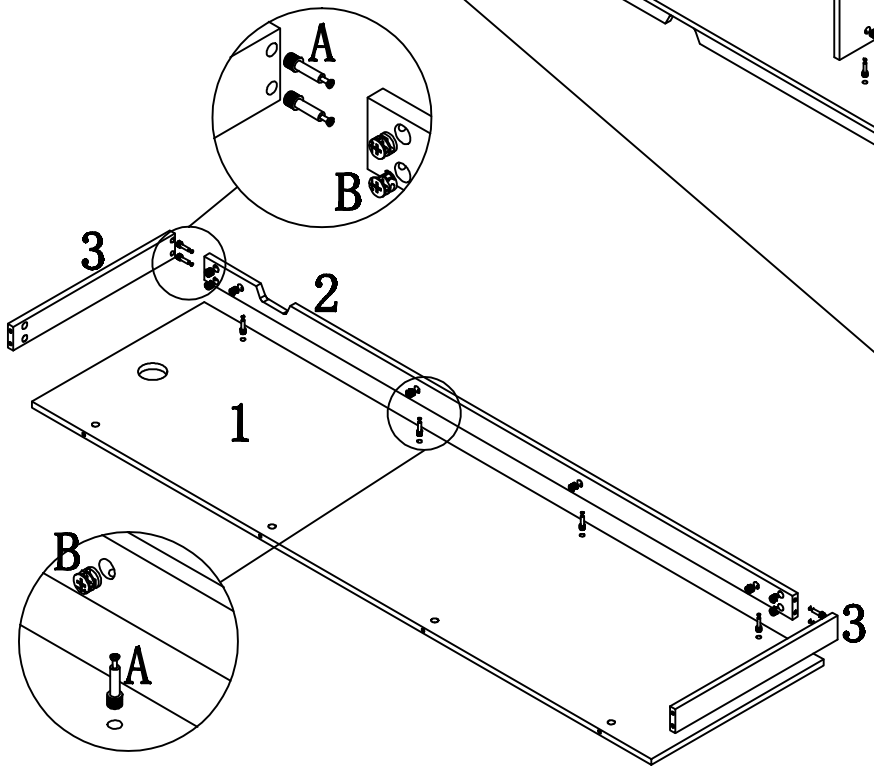


To fix the panel 4,5,6,7 ,then to fix the panel 8 ,final to fix the top panel 9

Second

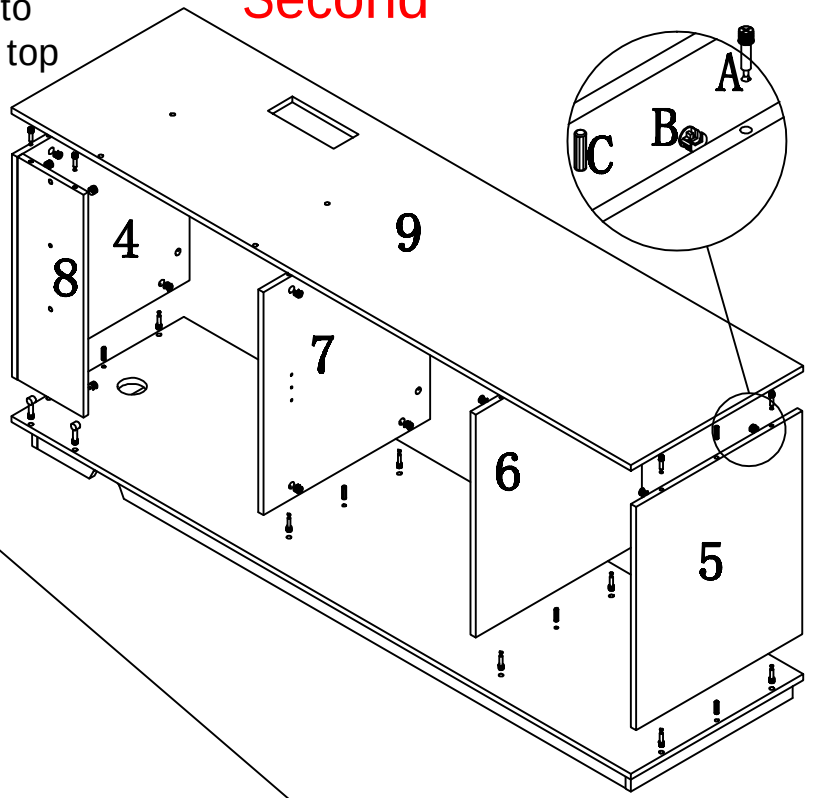


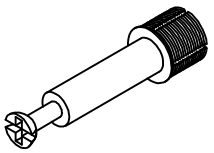


X20 A

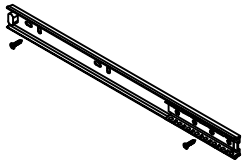

X1 G



X20 B

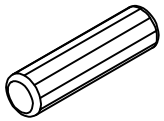

X4 C



X4 D


3. 5*14



X6 E


STEP:2

To fix the back panel 10

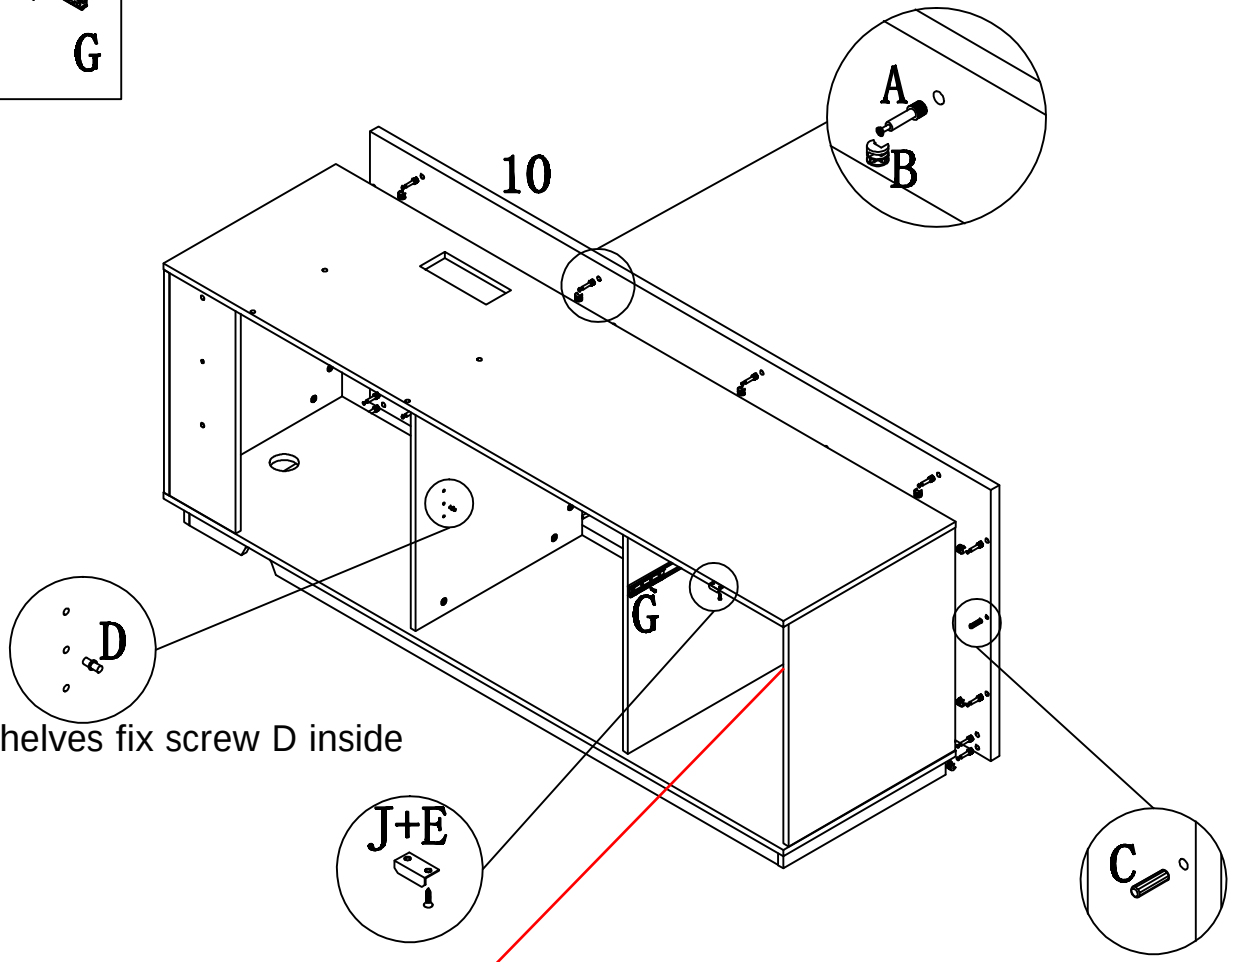


To put the shelves fix screw D inside


To fix the both side rail G and
fix the lock metal minifix J

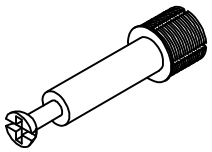

X4 A

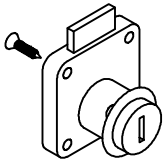

X1 H




X4 M


M4*18

STEP:3

To put the panel 14 inside and fix the panel 15




X4 B





X4 I

4*20

To fix the panel 11,12,13

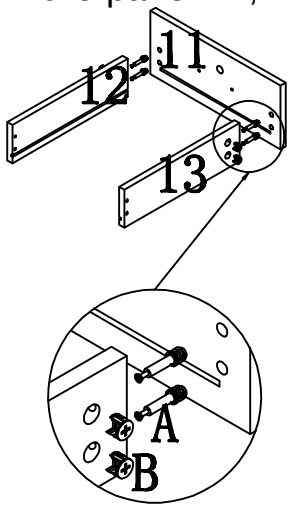

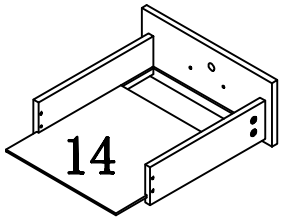


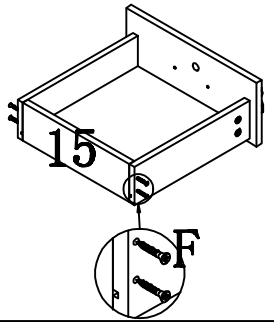

3.5*14




X18 E




X1 J

4*30

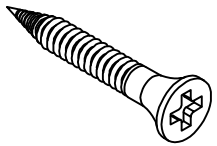



X4 F

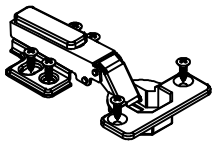


X2 K

To fix the hinge K on door panel 16 and fix the handle L ,then to fix in cabinet

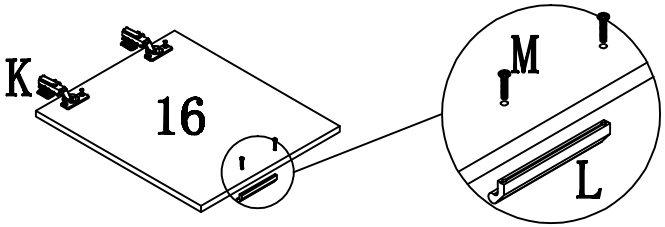

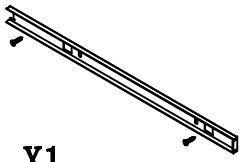


X1 G

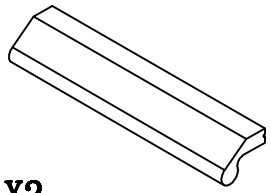


X2 L


To fix the both side rail G

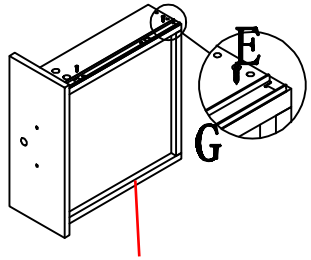


To use screw E to fix bottom panel four side more tough

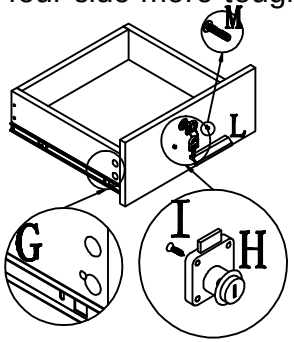


To fix the lock H and handle L

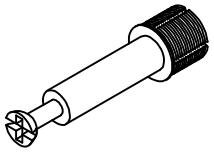

X16 A




X16 B




X1 N


STEP:4

To fix the front panel 20 and 21

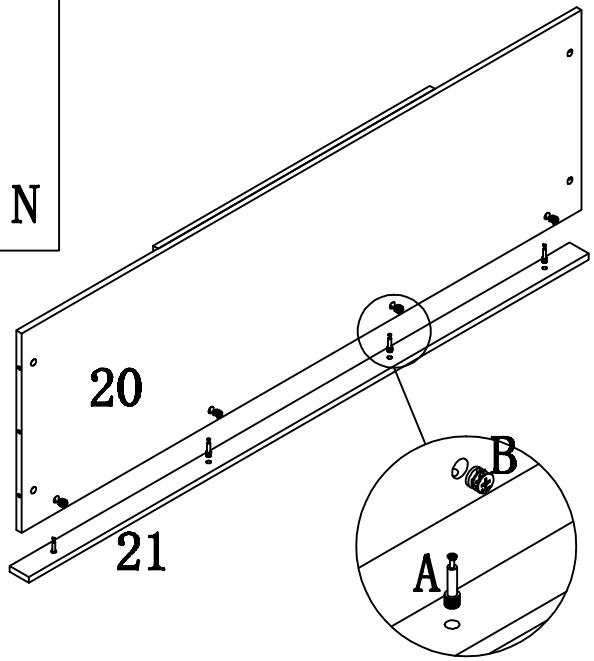


To fix the side table support panel 18 and 19

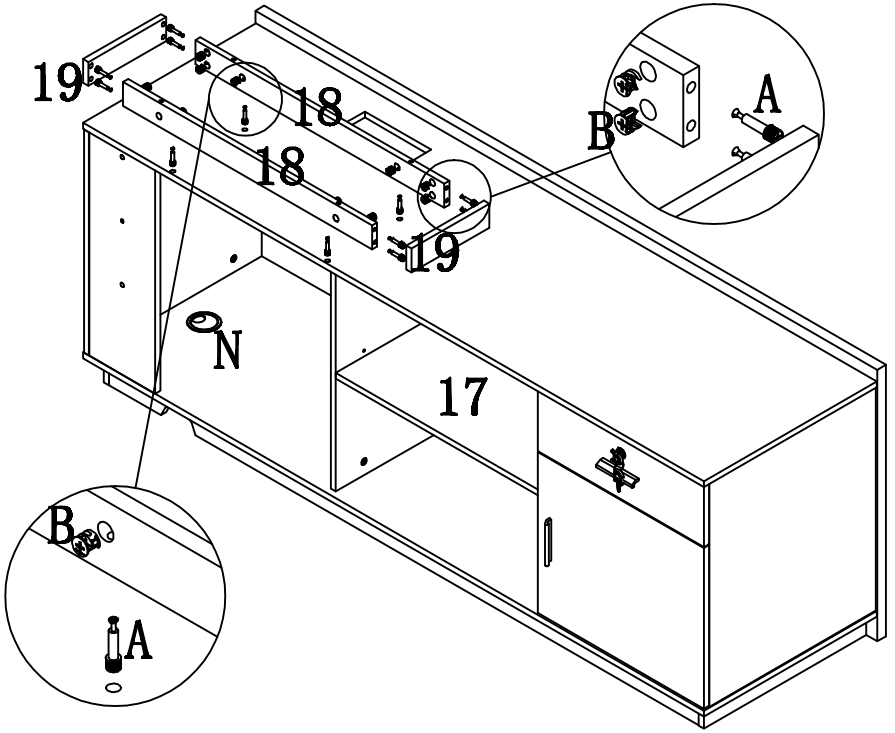


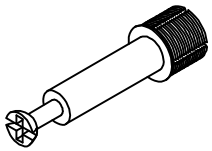

X4 A




X4 B

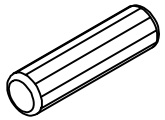


X2 C


STEP:5

To fix the front panel and side table and leg panel 22

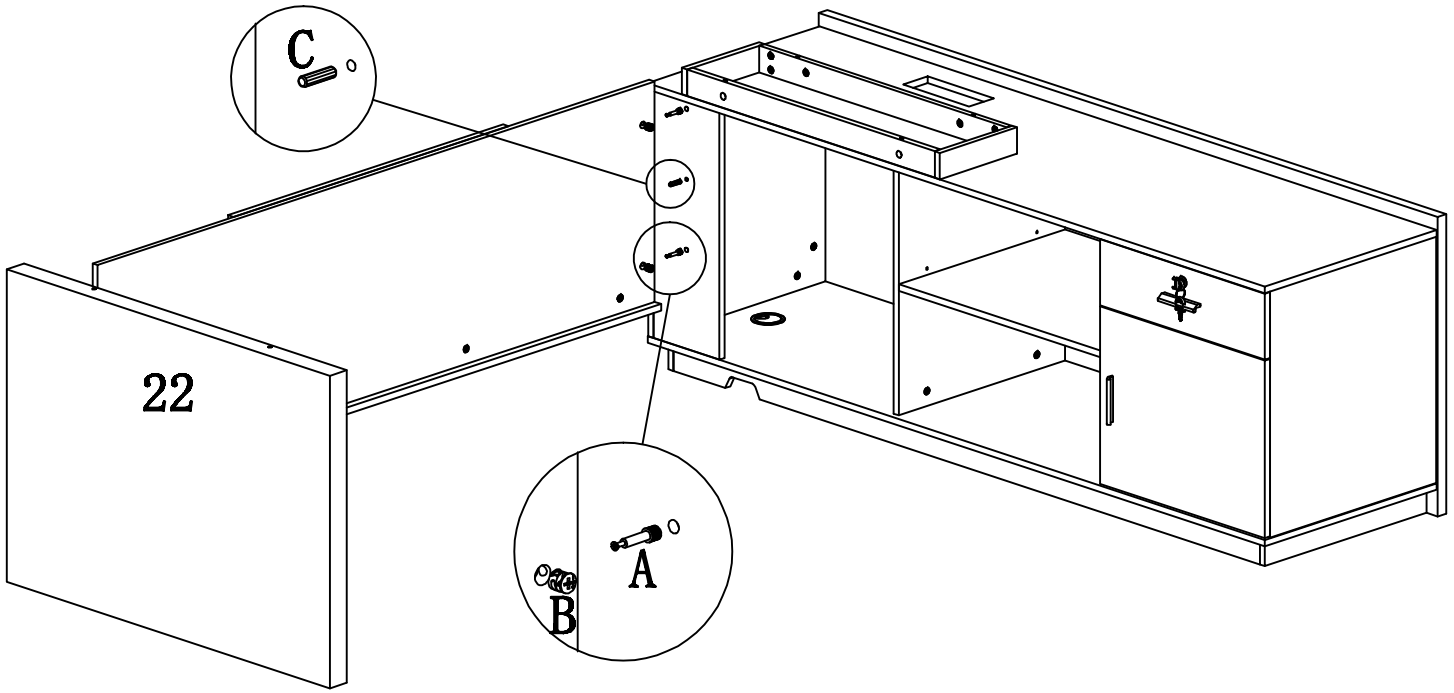


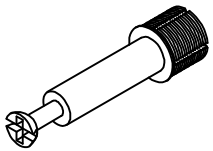

X6 A



X6 B

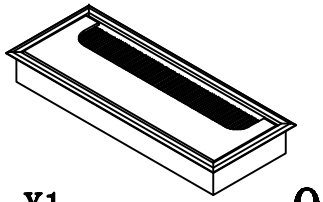

X1 O

STEP:6

To fix the table top panel 23

FINISH

