












246-000047


Minifix Screw  X32 A	Full overlay hinge  X10 G	Screw  X8 M
Minifix  X32 B	Handle  X4 H	Screw 3.5*14  X82 N
Wood Minifix  X6 C	Handle screw M4*18  X8 I	Lock(inside)  X2 O
Back panel bar fix  X1 D	Lock metal minifix  X3 K	Back panel rubber fix  X8 P
Shelves fix screw  X12 E	Lock  X2 L	

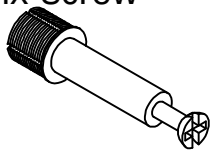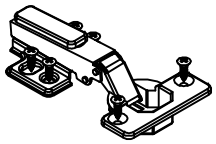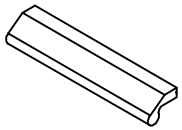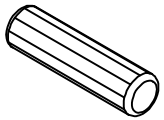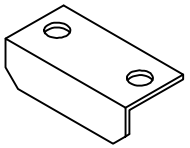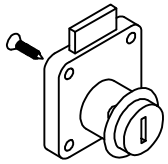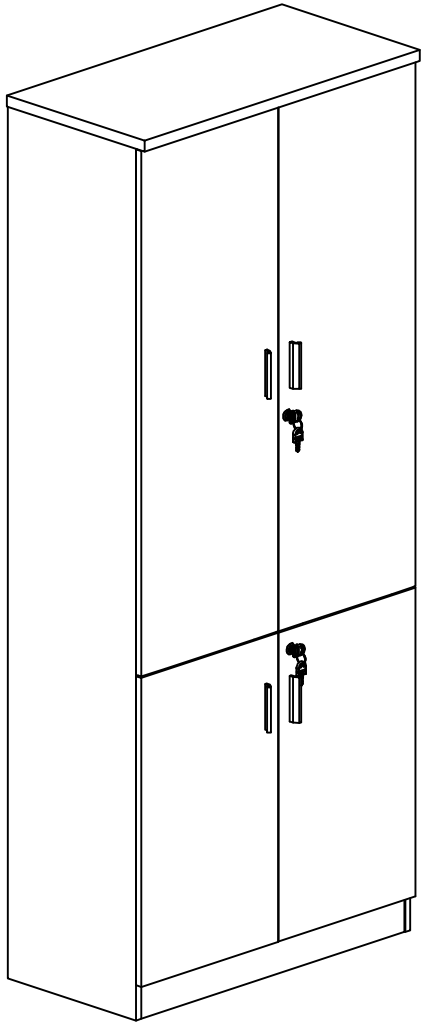


KB-632
(800X400X2000)

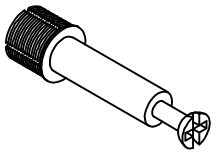

X28 A

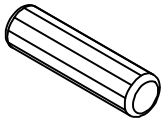


X4 C




X28 B

STEP:1


To fix the panel 1 and panel 2

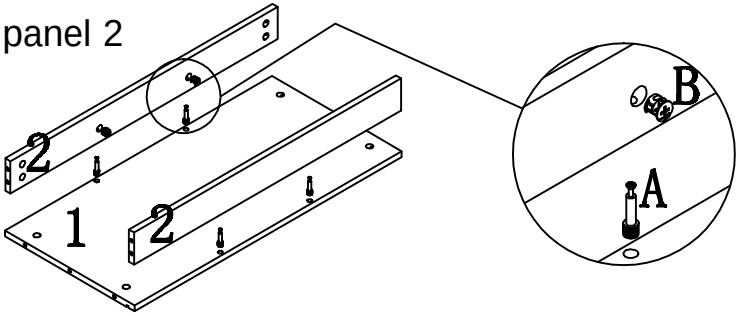


To fix the side panel 3 and bottom support firstly,then to panel 5,final to fix the panel 4

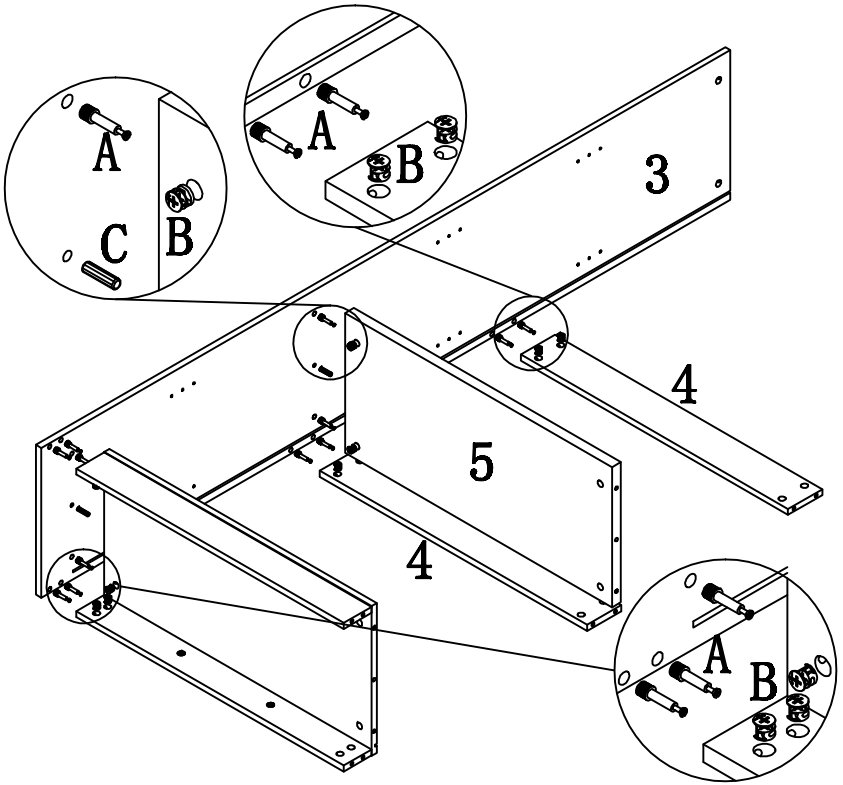


To fix the side panel 6

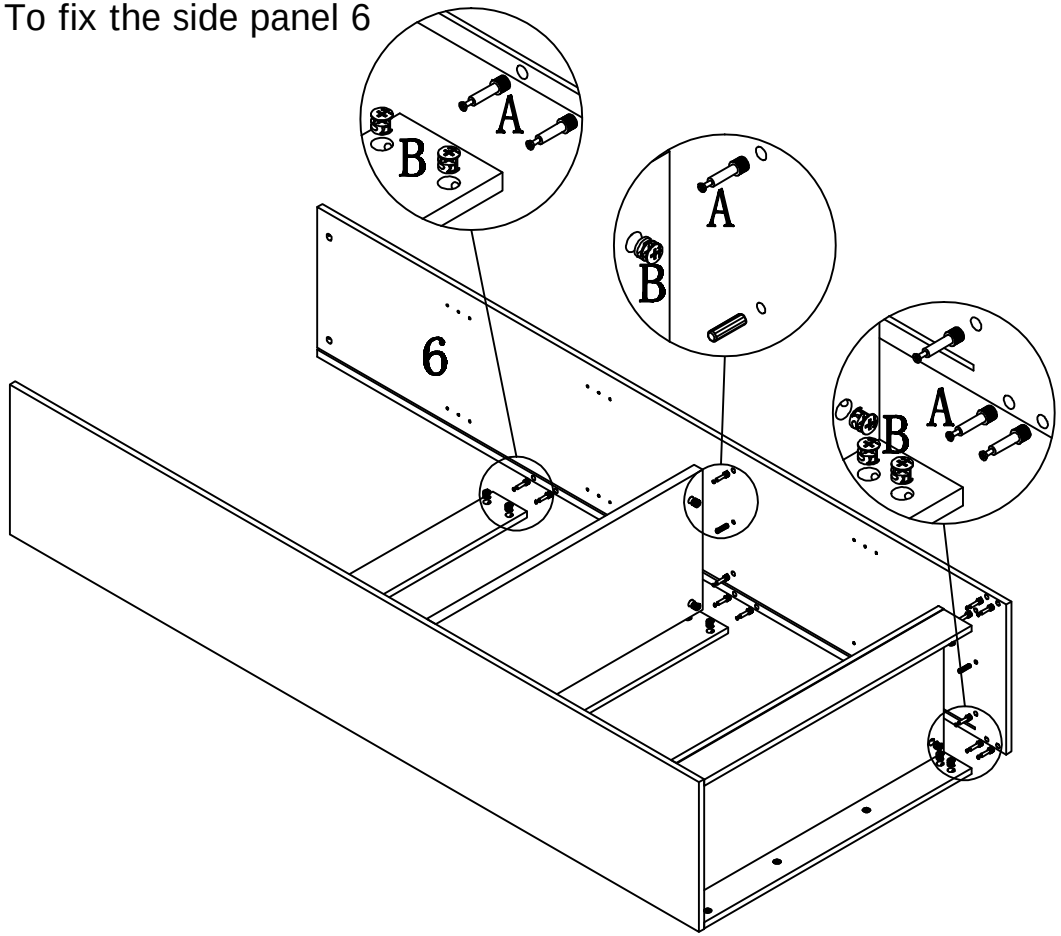


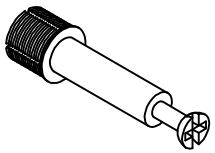


X4 A



X4 B

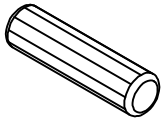

X2 C




X1 D




X12 E

STEP:2


To put the back panel 7 inside then use D to fix two panel 7





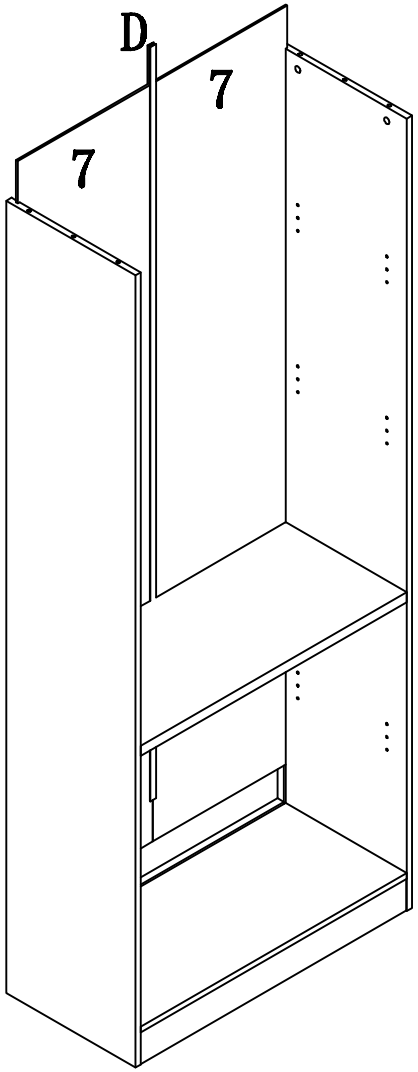


To fix the top panel 8

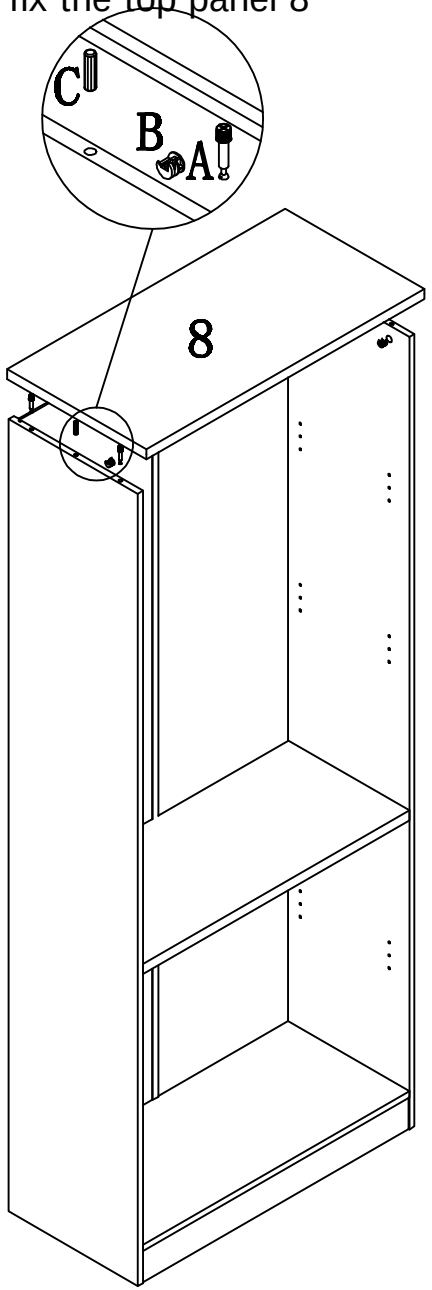


To fix all shelves fix screw E

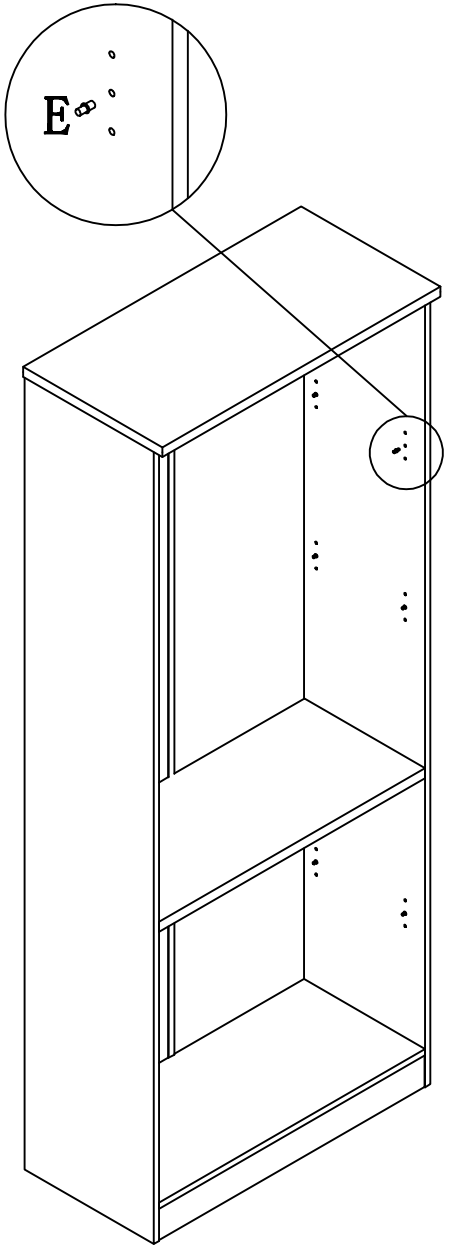

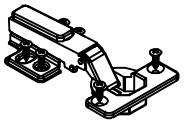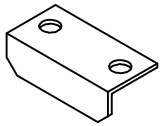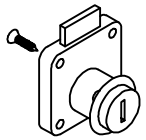 X10 G	3.5*14  X74 N
 X4 H	 X2 O
M4*18  X8 I	
 X3 K	
 X2 L	
4*20  X8 M	

STEP:3


To put the all shelves panel 12 inside ,to fix the hinges on doors, then to fix in cabinet

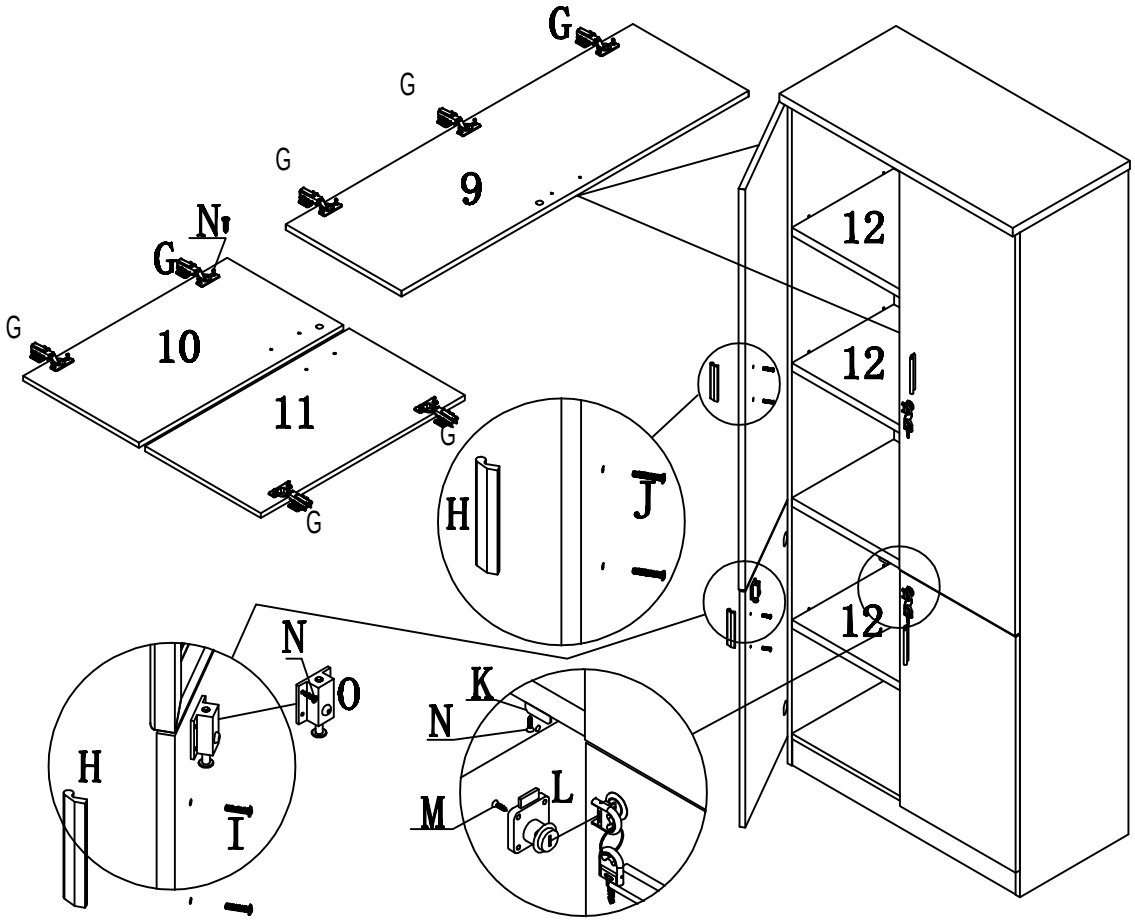


To fix the inside lock O on left wood door and fix the handles for all doors

To fix lock metal support K and fix the outside lock L

3.5*14




X8 N



X8 P

STEP:4

To fix the back panel rubber P

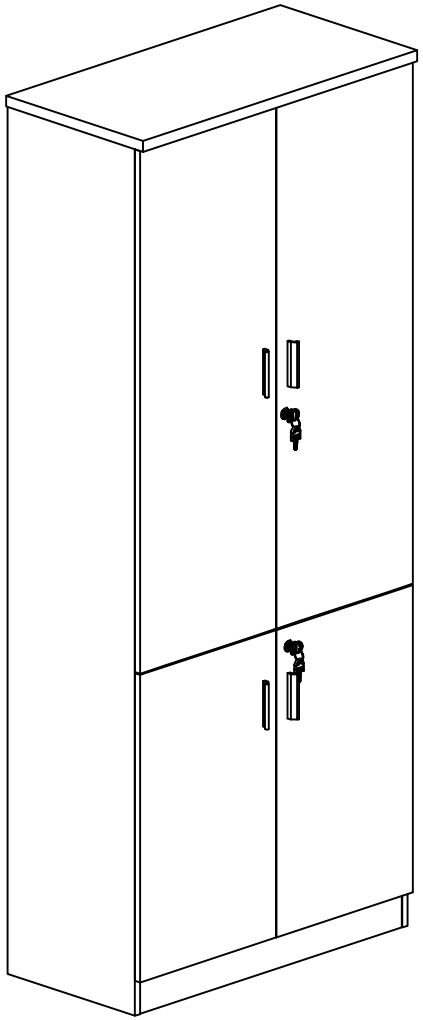

FINISH

